

 
Get started

Get to know your Trail



Initial boot-up

Charge the device by connecting it to the charger with the supplied USB cable.

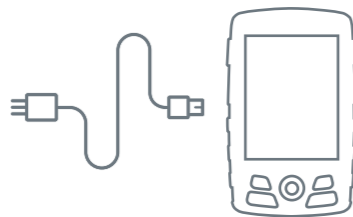

When the unit is charged long press the **Power** button to turn it on.



It's important that you connect your device to your Wi-Fi network so it can automatically carry out two important processes:

- Update software
- Synchronize data

Set up an account, download free maps and GO!

os.uk/gpssetup

Device layout

Lock button:
Short press: Lock/Unlock GPS

Map:
Press on the map to activate the tools

Main menu:
Manage the files and settings on your device.

Activity control:
Start, pause and finish an activity.

Page button:
Short press: Show next data page
Long press: Show main menu

Back button:
Short press: 'Back' in menus/
'Re-centre' in map
Long press: Show map

Status menu:
Press to check the status of the most frequently used features of the device (sensors, GPS...)

Power button:
Long press: Turn GPS on / Turn GPS off

Data bar:
Press to access the data pages

Contextual menu:
Press to access options available for the current page

 
ZOOM+ key: Zoom in map

ZOOM- key: Zoom out map

Joystick:
Move: Move map / menu
Short press: Press to select

Mapping


Choose map tiles for your device by going to your **My OS GPS** account in the OS Shop, clicking the **Buy maps** tab and following the on-screen instructions.

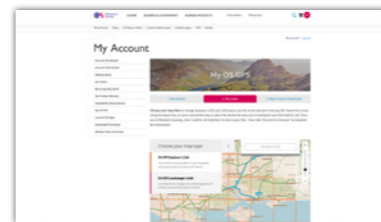

To access mapping on your device, press the icon (Menu > Maps) for the maps menu and select the tiles you want to display.

Return to the main screen to start navigation.

 Press **Start** and select your activity to start navigation.

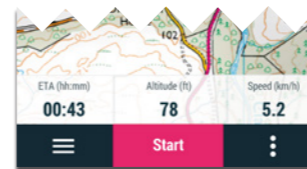


Get going

It's important to make sure you have a good GPS signal before you start.

Stand outside in an open area to connect to as many satellites as possible.

When the connection is ready, the icon will show as blue in the top menu.

 
Be patient as this can take a few minutes.

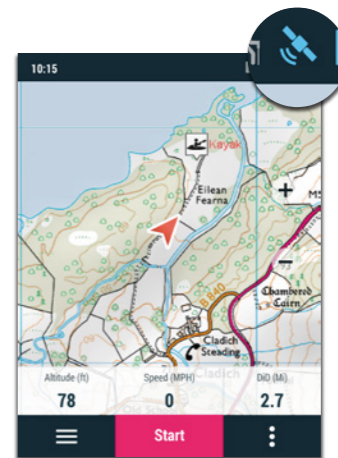

Data on the move

Your device tracks route and activity data in real-time.

 
Press the button or any data field on your map screen to see your data screens. The first shows your key route information.

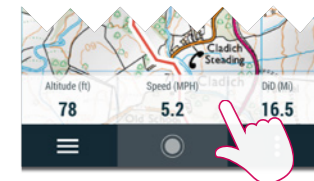

Data Page (1/4)	
Chronometer	Odometer (Mi)
01:45:52	8.6
Ascent (ft)	Mean Speed (MPH)
2850	3.8
Descent (ft)	Profile Odometer (Mi)
1980	256

More data

 
Scroll forward to access more detailed information.

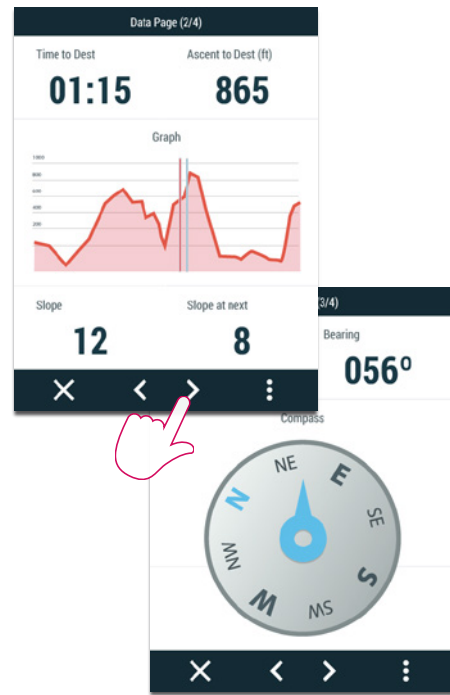

SeeMe

SeeMe's I.C.E. (In Case of Emergency) function will send an SMS and email to your emergency contacts from anywhere in the world if you get into trouble.

 To access it, press the **Status menu** and hit the  icon.

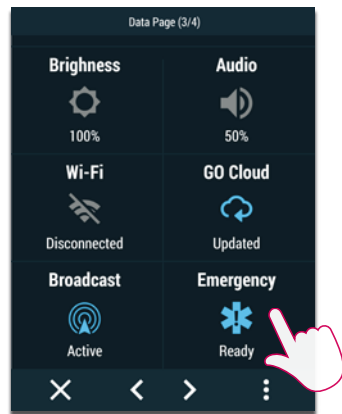

With Live Tracking, your friends can track your trips in real-time by logging into GO. To set up GO, go to your **My OS GPS** account in the OS Shop, click on the **SeeMe** link (under My devices) and follow the on-screen instructions.

Get even more from your GPS

You can use additional sensors to get more insight on your activities.

 


To see all OS accessories for your device, go to os.uk/gpsaccessories

Get your OS Maps subscription

Redeem your free 3-year subscription to OS Maps using the voucher code inside your box.

Use OS Maps to find inspiration and plot new routes on your desktop and mobile, then sync them with your GPS device. Plus, see GB in stunning 3D and find out what's around you with Augmented Reality.

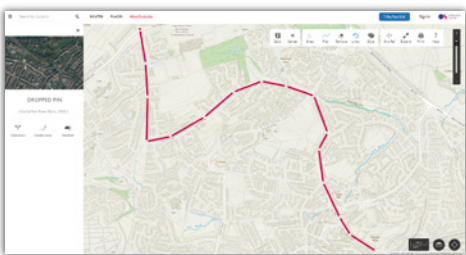

To synchronise your OS Maps account with your device, go to **Settings** on the device, select **My Accounts** and enter your OS Maps details.

Then, whenever you create a new route and are connected to WIFI, your device will update shortly after with the new route.

Support & warranty

Thank you for purchasing your Trail from Ordnance Survey. Now that you've set up your device, you're ready to start adventures with a GPS device that gives you the freedom to go further.

For a full set of instructions, or if you've encountered any problems setting up your Trail, the following support is available:

Full manual (PDF download)
os.uk/gpssupport

FAQs
os.uk/gpssupport

Ordnance Survey Customer Service Centre:

Phone
03454 560420

Email
customerservices@osleisure.uk

Your Trail comes with a 24 months manufacturer's warranty provided by COMPEGPS TEAM SL. For information about your warranty please visit our website:

os.uk/gpssupport



Manufactured by:
COMPEGPS TEAM SL
Made in Spain

Powered by
TwoNav

Quick Guide

Trail

