

# TWO NAV DELTA 2.7

## User manual

---

<b>1</b>	<b>Introduction.....</b>	<b>6</b>
<b>2</b>	<b>Start up &amp; Maintenance.....</b>	<b>7</b>
2.1	Care instructions .....	7
2.2	Basic parts of the device .....	7
2.3	Mounting.....	8
2.4	Application status .....	9
2.5	Recharging .....	10
2.6	Reset .....	11
2.7	Updating the firmware .....	11
2.8	Connection to computer .....	12
<b>3</b>	<b>Operation.....</b>	<b>12</b>
3.1	Map window .....	12
3.1.1	Explore the map .....	12
3.1.1.1	Anchor .....	13
3.1.2	Data mode .....	13
3.1.2.1	Basic functions.....	13
3.1.2.2	Additional functions .....	14
3.1.3	Tool mode.....	15
3.1.3.1	Tool bar .....	16
3.1.3.1.1	Basic functions .....	16
3.1.3.1.2	Additional functions.....	17
3.1.3.2	Bottom bar .....	17
3.1.3.3	Hint.....	17
3.2	Main menu .....	18
3.3	Data lists.....	18
3.3.1	Shifting over lists .....	19
3.3.2	Management of elements .....	19
3.3.3	Actions on elements .....	21
3.3.4	Order elements .....	22
3.3.5	2nd line data.....	23
3.4	Data pages.....	23
3.5	Contextual menu .....	24
<b>4</b>	<b>Navigation .....</b>	<b>25</b>
4.1	Modes.....	25
4.2	Start.....	25
4.3	Follow indications .....	28
4.4	Trip review .....	29
4.5	Set your alarms.....	29
4.6	Pause & Finish Triplog .....	30
4.7	Recording the track (Tracklog).....	31

<b>5</b>	<b>Maps</b> .....	<b>31</b>
5.1.1	What is a map?.....	31
5.1.2	Supported formats.....	32
5.1.3	Properties .....	32
5.1.4	Multimaps .....	33
<b>6</b>	<b>Waypoints/Routes/Tracks</b> .....	<b>33</b>
<b>6.1</b>	<b>Descriptions</b> .....	<b>34</b>
6.1.1	Waypoints.....	34
6.1.1.1	What is a waypoint? .....	34
6.1.1.2	Supported formats.....	34
6.1.1.3	Properties.....	34
6.1.1.4	Active Waypoints File.....	35
6.1.2	Routes.....	35
6.1.2.1	What is a route?.....	35
6.1.2.2	Supported formats.....	35
6.1.2.3	Properties.....	36
6.1.3	Tracks.....	36
6.1.3.1	What is a track? .....	36
6.1.3.2	Supported formats.....	36
6.1.3.3	Properties.....	37
<b>6.2</b>	<b>Basic operations</b> .....	<b>38</b>
6.2.1	Creation of waypoints/routes/tracks .....	38
6.2.1.1	On the map .....	38
6.2.1.2	From data lists.....	38
6.2.1.2.1	Waypoints lists.....	38
6.2.1.2.2	Routes lists.....	39
6.2.2	Move position of waypoints.....	39
6.2.3	Add waypoints to a route/track.....	39
6.2.4	Graph representation of routes/tracks .....	40
6.2.5	Add associated files to waypoints/routes/tracks.....	40
6.2.6	Navigate to a waypoint/route/track .....	41
6.2.6.1	Navigation elements.....	42
<b>6.3</b>	<b>Advanced operations</b> .....	<b>42</b>
6.3.1	Waypoints.....	43
6.3.1.1	Modifiy for all waypoints .....	43
6.3.1.2	Reset .....	43
6.3.2	Routes.....	43
6.3.2.1	Modifiy for all waypoints .....	43
6.3.2.2	Change the order of the waypoints in a route.....	43
6.3.2.3	Invert a route .....	43
6.3.2.4	Convert a route into a track.....	43
6.3.3	Tracks.....	43
6.3.3.1	Import altitudes .....	43
6.3.3.2	Delete stopped points start/end .....	43
6.3.3.3	Reduce the number of points .....	44
6.3.3.4	Assign time/speed .....	44

6.3.3.5	Delete aberrant points .....	44
6.3.3.6	Invert track .....	44
6.3.3.7	Convert a track into a route.....	44
6.3.3.8	Track legs .....	44
6.3.3.8.1	Create legs.....	44
6.3.3.8.2	Operations with legs .....	45
<b>7</b>	<b>Additional features.....</b>	<b>45</b>
7.1	<b>Simulate.....</b>	<b>45</b>
7.2	<b>Geocaching .....</b>	<b>46</b>
7.2.1	What is geocaching? .....	46
7.2.2	Supported formats.....	46
7.2.3	Create field notes .....	46
7.2.4	Set status for geocaches .....	47
7.2.5	Add associated files with Land/Air.....	47
7.2.6	Navigate a geocache .....	48
7.3	<b>e-Roadbook.....</b>	<b>49</b>
7.3.1	What is an e-Roadbook? .....	49
7.3.2	Supported formats.....	49
7.3.3	Create an e-Roadbook with Land/Air.....	49
7.3.4	Navigate an e-Roadbook .....	51
<b>8</b>	<b>Settings.....</b>	<b>52</b>
8.1	<b>System .....</b>	<b>52</b>
8.1.1	Device .....	52
8.1.1.1	Default settings .....	52
8.1.1.2	Status report.....	52
8.1.1.3	About .....	52
8.1.1.4	Activation information.....	52
8.1.2	Language.....	52
8.1.3	Units .....	52
8.1.4	Brightness.....	53
8.1.5	Audio .....	53
8.1.6	Folders .....	53
8.1.7	Time zone.....	54
8.1.8	Coordinates .....	54
8.2	<b>Map.....</b>	<b>54</b>
8.2.1	Automaps.....	54
8.2.2	Autozoom.....	55
8.2.3	Re-center.....	55
8.2.4	Orient map.....	56
8.2.5	CDEM reliefs.....	56
8.2.6	3D .....	57
8.3	<b>Display .....</b>	<b>58</b>
8.3.1	Tracks.....	58
8.3.2	Hint .....	59
8.3.3	Rotate screen.....	59
8.3.4	Nightview .....	60

8.3.5	Pointer.....	60
8.3.6	Themes.....	61
8.3.7	Labels.....	61
8.3.8	POI (Points Of Interest).....	61
8.3.9	Geocaching.....	62
<b>8.4</b>	<b>Fields &amp; Buttons.....</b>	<b>62</b>
8.4.1	Data fields.....	62
8.4.2	Tool bar.....	63
8.4.3	Map page.....	63
8.4.4	Keys.....	64
<b>8.5</b>	<b>Alarms.....</b>	<b>64</b>
8.5.1	Data fields.....	64
8.5.2	Tracks.....	65
8.5.3	Waypoints.....	65
8.5.4	Speedcams.....	65
8.5.5	Speed limit.....	66
8.5.6	Depth.....	66
<b>8.6</b>	<b>Training.....</b>	<b>66</b>
<b>8.7</b>	<b>Vehicle.....</b>	<b>67</b>
<b>8.8</b>	<b>Navigation.....</b>	<b>67</b>
8.8.1	Autoroute.....	68
8.8.1.1	Restrictions.....	68
8.8.1.2	Recalculate.....	68
8.8.1.3	Calculation method.....	68
8.8.2	Next waypoint.....	68
8.8.3	Estimated times.....	69
8.8.4	Slope.....	69
<b>8.9</b>	<b>Tracklog.....</b>	<b>70</b>
<b>8.10</b>	<b>Autonomy.....</b>	<b>70</b>
<b>8.11</b>	<b>Communications.....</b>	<b>71</b>
8.11.1	Bluetooth.....	71
8.11.2	GPS.....	71
<b>8.12</b>	<b>Calibration.....</b>	<b>71</b>
8.12.1	Touchscreen.....	71
8.12.2	Altitude (Barometer).....	72
8.12.3	Bearing (Compass).....	72
<b>8.13</b>	<b>Advanced.....</b>	<b>72</b>
<b>9</b>	<b>Management from a computer.....</b>	<b>76</b>
9.1	Open and analyse the data recorded by TwoNav.....	76
9.2	Activate and transfer files between 'Computer-TwoNav'.....	77
9.2.1	Via contextual menu.....	77
9.2.2	Dragging files directly from the data tree.....	77
9.3	Update your device to the latest TwoNav version.....	77
<b>10</b>	<b>Warranty.....</b>	<b>78</b>
<b>11</b>	<b>Appendix: Data fields.....</b>	<b>79</b>
<b>12</b>	<b>Appendix: Tool bar buttons.....</b>	<b>84</b>

<b>13</b>	<b><i>Appendix: Special characterS</i></b> .....	<b>86</b>
-----------	--	-----------

## 1 INTRODUCTION

CompeGPS dedicates all its experience and effort to enable you get the best out of your outdoor activities such as hiking, cycling, trail running, geocaching...

TwoNav offers directional assistance, both on-road and off-road activities, this assistance is invaluable in order to increase the safety of your itineraries. Despite this, under certain circumstances, you may be distracted by misuse of the application, in this case it may become a hazard either for you or the environment. Please, use TwoNav application with responsibility.

Even TwoNav offers you the possibility to use this application in any type of vehicle but it is very important to take into consideration a series of recommendations and regulations to properly use the application:

- **Fit TwoNav application correctly:** TwoNav should be fitted in a place where it will not obstruct your visibility. Moreover, it must be secured to ensure it cannot fall off easily and hinder driving.
- **Do not handle TwoNav while driving:** Plan all details regarding your itinerary before starting the navigation. Any change must be done with the vehicle stopped in a safe place (not on the road or kerbs).
- **Guided by sound indications:** TwoNav application will warn you with sound indications of upcoming manoeuvres and when to carry them out. A glance at the visual information displayed by TwoNav may be useful in order to know which path you should take, but you must resort to this visual information only if you can do it safely (vehicle stopped). When driving, you should always keep your eyes on the road.
- **Front-seat passenger can easily help you:** The driver is always facing the road, so if you have a front-seat passenger, CompeGPS strongly recommends this person to be in charge of handling the TwoNav application. The front-seat passenger will be able to make any clarification or changes in the navigation.
- **Getting it wrong is not a problem:** If any indication provided by TwoNav cannot be followed, the application will automatically re-calculate a new itinerary adapted to the new situation. This makes sure that you will always reach your final destination.
- **Maps always contain errors:** Remember that it is impossible to have 100% updated information for all your maps. So, new streets, changes in street directions or road restrictions may invalidate partially the calculation of your itinerary. It is very important to be aware of these changes and to get adapted to the new situation.

- **Traffic regulations have always preference:** In order to fully comply the traffic regulations of each country.

All new developments are based on suggestions and feedback from users like you. If you would like to share your ideas and proposals with CompeGPS, feel free to do it at <http://CompeGPS.uservoice.com>

If you have any questions or problems regarding the use of our products, please contact the on-line technical support department of CompeGPS at <http://Support.CompeGPS.com>

## 2 START UP & MAINTENANCE

### 2.1 Care instructions

Do not remove the device from the cradle while it is exposed to water, liquids must not get in contact with connectors. While the device is out of the cradle, make sure the rubber is dry and firmly seated into the connectors. Avoid vibration or harsh movements on the device while USB port is connected, vibrations may damage USB port and thus void any warranty.

**Important:** Be sure the generator and regulator of the vehicle can afford extra 12V 2A charge, otherwise irreparable damages might occur.

### 2.2 Basic parts of the device



**'ON/OFF'** key:

- **Short press:** Device on
- **Large press:** Menu

**'PAGE'** key:

- **Short press:** Data pages
- **Large press:** Create waypoint

**Note:** You can customize button functions in 'Main menu > Settings > Fields & Buttons > Keys'.

## 2.3 Mounting

- **Power consumption:**


Delta and its regulator have a static consumption, please do not connect regulator directly to the battery in vehicles: connect regulator to power switch which only gets power under 'On' position.

- **Cable installation:**


1. Align the arrow on the cable and insert B into A




2. Make sure to push B all the way to end



3. Move twist cover C towards A

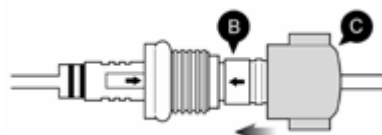

4. Turn twist cover C clockwise to tighten the cable connection

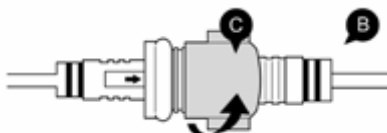

- **NMEA cable pinout:**

**RED** = NMEA IN + / Rx +

**BLACK** = NMEA IN - / Rx -


**WHITE** = NMEA OUT + / Tx +

**BLUE** = NMEA OUT - / Tx -



## 2.4 Application status



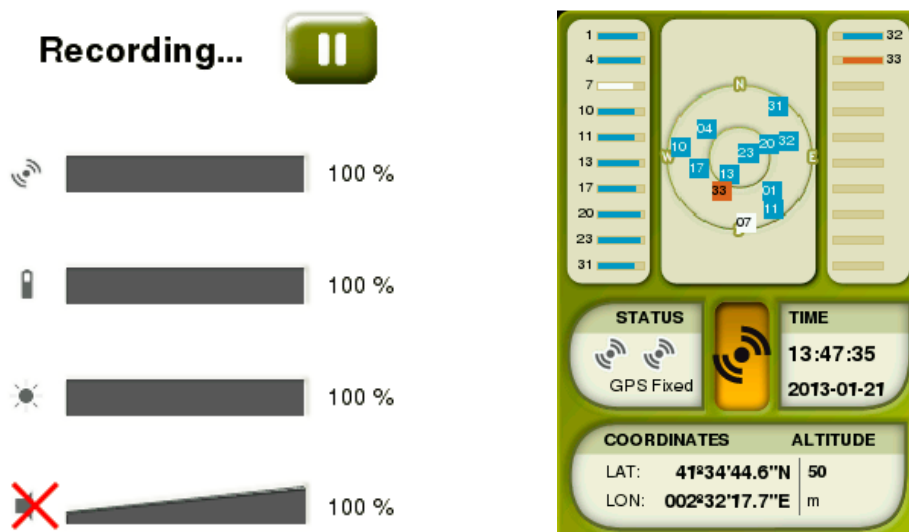




From 'Main menu > Status' you can check the status of general functions of TwoNav application.



- **Triplog (recording of itinerary):** 'Triplog' is the command allowing you to manage the recording of your itinerary, your itinerary will be recorded when 'Triplog' is started.
- **Reception and position of satellites:** Check the number of satellites available as well as their distribution orbiting over the vault and their coverage.

By default, when TwoNav is launched, it will try to connect to available satellites so that you can start working with GPS function. If GPS is disconnected, TwoNav will not receive any position signal and many application functions will stop working.

Possible states for GPS function:

- |   |                   |   |   |
|---|-------------------|---|---|
|  | Disconnected      |  | Connected (without position)                  |
|  | Connecting        |  | Connected (with position)                     |
|  | Error (not found) |  | Connected (with position) and recording track |
|  | Simulating        |   |   |



### Connect/Disconnect GPS function:

Press the central button to switch on/off the GPS of TwoNav.

**Note:** TwoNav will attempt to fix your current position, but if you are somewhere without GPS coverage (for example: inside a building), GPS status will turn into 'Connected (without position)'.

- **Battery level:** Check the current battery level for TwoNav application.
- **Screen brightness level:** Set the general brightness level for the screen.
- **Audio level:** Set the general audio and the volume of each audible element individually.

## 2.5 Recharging

Your GPS device may operate around a maximum of:

- **TwoNav Delta:** 4 consecutive hours with no need of recharging.

**Important:** *TwoNav Delta needs a minimum tension to be started. If battery is completely empty and computer connection cannot provide it, the device will not start. The same situation can happen with some wall chargers. In this situation, you have several options to start device:*

- *Plug it to its cradle.*
- *Use a 2A\*1h USB wall charger.*
- *Use a separate USB charger for battery. When it has some charge you can put it in TwoNav Delta and it will be able to start device.*
- *Leave it connected to a normal USB power source (computer or wall charger) and wait until it is charged enough to start automatically.*

Device's screen uses an important amount of energy resources, so it is recommended to turn it off while not using it. By doing this simple action, the battery life will be longer. Moreover, remember that the screen of the device will be turned off after inactivity.

Battery life can be increased by reducing the level of screen backlight or by turning the screen off when not in use (configuring the automatic shutdown screen function or by activating the standby mode with a long press on 'On/Off' key and selecting 'Block').

Configure more options at 'Main menu > Settings > Autonomy'

Additionally, you can also recharge the li-ion battery of the GPS device using several power sources:

- **Computer:** When connecting the device to a computer, besides allowing you to manage the data present in the memory, the battery is also charged.
- **Battery charger:** Designed to charge the battery out of the device. Charge the spare battery while you use the GPS with a different battery.
- **Wall charger:** Charge the battery using a wall power point.
- **Car charger:** Allows you to charge the battery during 'On-Road' navigations.
- **DC/DC charger:** Allows you to charge directly from battery of the vehicle, assuring waterproof connection with TwoNav Delta's cradle.

You can operate the device normally while connected to the power source, except if it is connected to a computer. Then the device will only operate as a massive storage unit.

***Important:** Avoid vibrations on device while USB port is connected. It may deform USB port, being reparation out of warranty.*

CompeGPS offers you a wide range of accessories in order to improve the battery life of your device, get to know more about these accessories at <http://www.CompeGPS.com>

## 2.6 Reset

It is recommended not to force the shutdown of the device unless it is necessary:

- **Force the device to switch off:** Press 'On/Off' key for 10 seconds.

## 2.7 Updating the firmware

TwoNav software is continually being improved in order to add new functionalities and polish errors. Your device has several software levels:

- **Eboot/Iboot:** Starting component which runs the operating system.
- **Operating system:** Executed under TwoNav and controlling the more basic operations of the device.
- **TwoNav:** Executed over the operating system and interacting with you.

Normally, software updates are for TwoNav, but eboot/iboot and operating system can also have updates. Visit regularly [www.CompeGPS.com](http://www.CompeGPS.com) in order to

be informed about the latest version for your device and to get to know the steps to follow to update it.

## 2.8 Connection to computer

When TwoNav device is connected to computer by means of the USB wire, the TwoNav application is closed and the device becomes a storage unit. New storage units will then be shown on your computer:

- **GPS disk:** Inner memory of the device.
- **Removable disk:** Depending on the GPS device, a microSD or SD card may be inserted.

This way you will be able to transfer data from your computer to the GPS device and vice versa. Please note that the folders to save/take data in the GPS in the memory card are:

- **Default folder for maps:** 'TwoNavData/Maps'
- **Default folder for your recorded tracks:** 'TwoNavData/Data/Tracklog'
- **Default folder for tracks/waypoints/routes:** 'TwoNavData/Data'

**Important:** TwoNav Delta needs a minimum tension to be started. If battery is completely empty, computer USB connection cannot provide it, the device will not start. Same situation can happen with some wall chargers.

**Note:** You can also transfer elements from Land/Air software (Windows/Mac platforms), more information at <http://www.CompeGPS.com>

## 3 OPERATION

### 3.1 Map window

#### 3.1.1 Explore the map

- **Move map:** In order to explore the surroundings, drag the map by interacting with the interface.
- **Zoom map:** Use the 'Zoom' buttons to adjust the zoom level.
- **Recenter map:** Press the 'Recenter' button when you wish return to your current position.

**Note:** Although the management of elements is centralized at 'Main menu > Data', it is also possible to carry out many other actions directly from the map window or using the contextual menu (check the chapter 'Contextual menu').

### 3.1.1.1 Anchor

To anchor a virtual position somewhere is to virtually replace your current position for a new position in the map.

Once fixed, information displayed on proximity fields and 'Hint' function will be based according to the new anchored position, and not on your real position. Moreover, if 'Anchor here' is pinned, options such as 'Recenter' map will be applied to the anchored waypoint instead of your current position.



In order to anchor a position reproduce any of these options:

- 'Map window > Contextual menu > Anchor here'
- 'Main menu > Data > Item > Contextual menu of waypoint > Anchor here'


In order to unpin the fixation and restore the current position as the default one, press: 'Contextual menu on the map > Unanchor'.

## 3.1.2 Data mode

### 3.1.2.1 Basic functions

By default, data bar shows a few relevant data fields. Additionally, when navigating a route/track, it has an extra state which shows altitude profile.

Press the button at the right side to switch between different status:

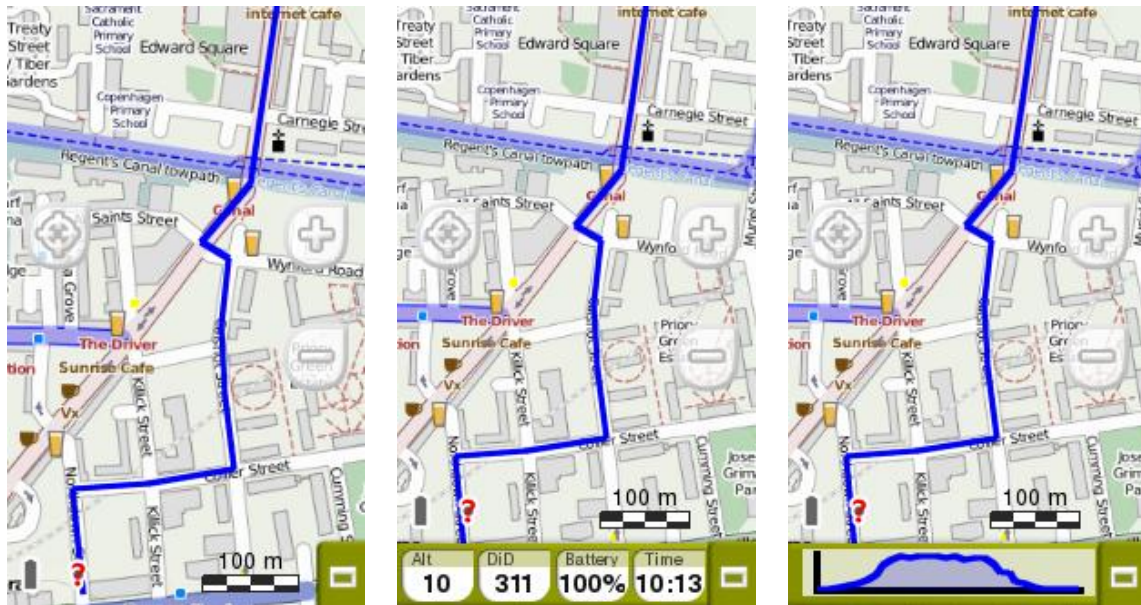

Hidden data bar



Fields bar



Graph bar

The data fields contained in the data bar can be configured from *'Main menu > Settings > Fields & Buttons > Data fields'*. You can also change a concrete data field by opening the contextual menu on it.



**Note:** Access to the main menu directly by clicking on the data bar.

### 3.1.2.2 Additional functions

Additional functions on map window can be configured from *'Main menu > Settings > Fields & Buttons > Map page'*.

- **Infocurrent:** Information related to present position.
  - **Default:**
    - **'Off-Road' mode:** Compass
    - **'On-Road' mode:** Current street
  - **Inside waypoint radius:** Waypoint name (if waypoint has associated files, click the clip icon to reproduce them).



- **Nextevent:** Information related to the next position (direction and distance). GOTO arrow shows direction of the following section of the

track. This parameter is the distance to calculate tangent to give direction. Take the direction of this arrow as a reference to keep going your way.



- **Infonext:** Information related to next events (not shown if no destination is selected).
  - **'Off-Road' mode:** Name of the next waypoint (if waypoint has description, it will be shown after the name).
  - **'On-Road' mode:** Next street (Some roads have information about signposts. If this information is available 'Infonext' will show a reproduction of the real signpost).

'Infonext' can be displayed in several states:

1. One line

Turn RIGHT at the tower, take the main

2. Extended

Turn RIGHT at the tower, take the main track with white earth, ATTENTION !! don't take any side path.

3. Text viewer (fully displayed)

### 3.1.3 Tool mode

In order to access to the 'Tool' mode, do a short tap on any place of the map.



'Data' mode



'Tool' mode + 'Hint' function

### 3.1.3.1 Tool bar

Allows a quick access to some functions (its content can be configured from 'Main menu > Settings > Fields & Buttons > Tool bar'):

#### 3.1.3.1.1 Basic functions




- **Mark and edit waypoint:** Create a waypoint at current position and access to its properties to modify them.
- **2D/3D/3D+:** Switch between different map perspectives: '2D > 3D > 3D+'.



2D >>>> 3D flat >>>> 3D+ >>>> 3D+ only relief

- **Move map (Panning/Rotate):** Move the map without changing its orientation or change the orientation of the map in a clock-wise, anti clock-wise sense or up/down.

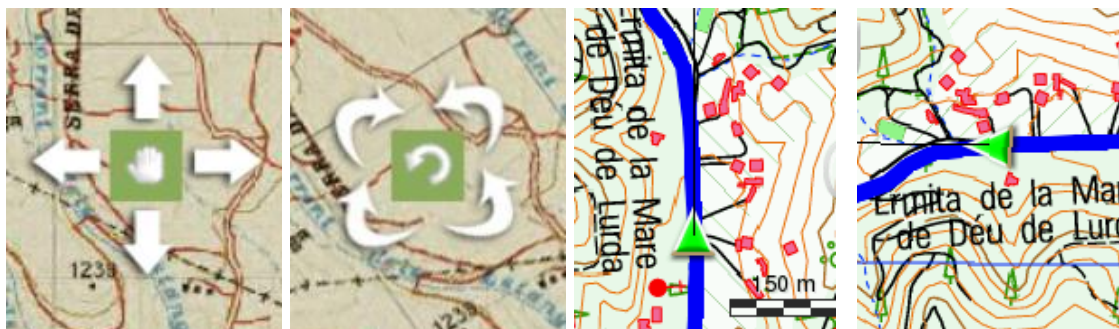

- **Orient map (North up/Track up):** The map may be fixed on the north or rotate according to your movements.

**Note:** You can also include and remove the functions of the tool bar according to your needs from 'Main menu > Settings > Fields & Buttons > Tool bar'.



### 3.1.3.1.2 Additional functions



Extra buttons are automatically added to tool bar in specific situations:

- **Simulating mode:** 'Pause', 'Stop' and several functions to manage the speed of the simulation.
- **Navigating mode:** 'Next waypoint' and 'Previous waypoint' to jump to next waypoint or go back to the previous one.
- **Competing against the 'Virtual Coach':** 'Synchronize Virtual Coach' to automatically place the 'Virtual Coach' at your current position (only if 'Virtual Coach' function is enabled).
- **Editing mode:** When the edition of tracks/routes is finished, press 'Close edition' to close the editing mode.

### 3.1.3.2 Bottom bar

Allows a quick access to some functions:



- **Main menu**
- **Page tools**
- **Start/Pause**

**Note:** Do a short tap again on the map to show 'Hint' information. 'Tool' mode and 'Hint' will be automatically hidden after 3 seconds.

### 3.1.3.3 Hint

If 'Hint' function is enabled ('Main menu > Settings > Display > Hint'), when clicking any point on the map window, TwoNav will show useful information of the specific point that you selected.



This function can be fully customized according to your will: add or exclude the data fields that later on will be displayed on the map window: map information, coordinates of this position, bearing to this position, distance to this position, altitude of this position...

### 3.2 Main menu

From the main menu, you can manage most of the system's functions by accessing the different sections. Press on menu elements in order to activate them or access their sub-menus.



### 3.3 Data lists



List of maps

List of waypoints

List of tracks

At 'Main menu > Data', you will be able to manage the available files on your device. Files to be taken into consideration on these lists are the files saved at:

- **Default folder for maps:** 'TwoNavData/Maps'
- **Default folder for your recorded tracks:** 'TwoNavData/Data/Tracklog'
- **Default folder for tracks/waypoints/routes:** 'TwoNavData/Data'

Although the management of elements is centralized at 'Main menu > Data', is also possible to carry out many other actions directly from the map window or using the contextual menu.

**Note:** *You can also transfer elements from Land/Air software (Windows/Mac platforms), more information at <http://www.CompeGPS.com>*

### 3.3.1 Shifting over lists

A scroll system has been developed in order to facilitate the shifting through these lists, which allows for the movement around the different options by dragging the finger upwards or downwards.




- **Short shift:** The last displayed element will become the first on the list.
- **Long shift:** The list will keep scrolling down and it will stop at the end or by pressing on it.


If you want to move along the lists in a more accurate way, you may use the side arrows to achieve a more controlled movement.

### 3.3.2 Management of elements

1. **General view:** Opened elements are placed at the top of the list with a ticked square.
2. **Open element:** Press the name of the element.

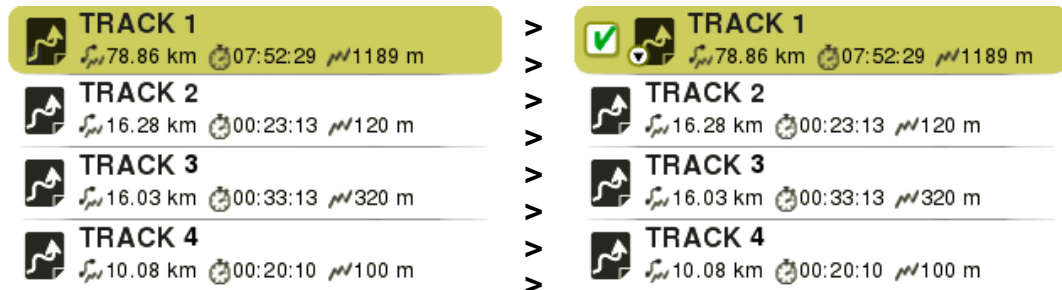

3. **Check the properties:** Press the name of the opened element. At properties window, you can check all the information related to the element and carry out several actions (available information will depend on selected element).

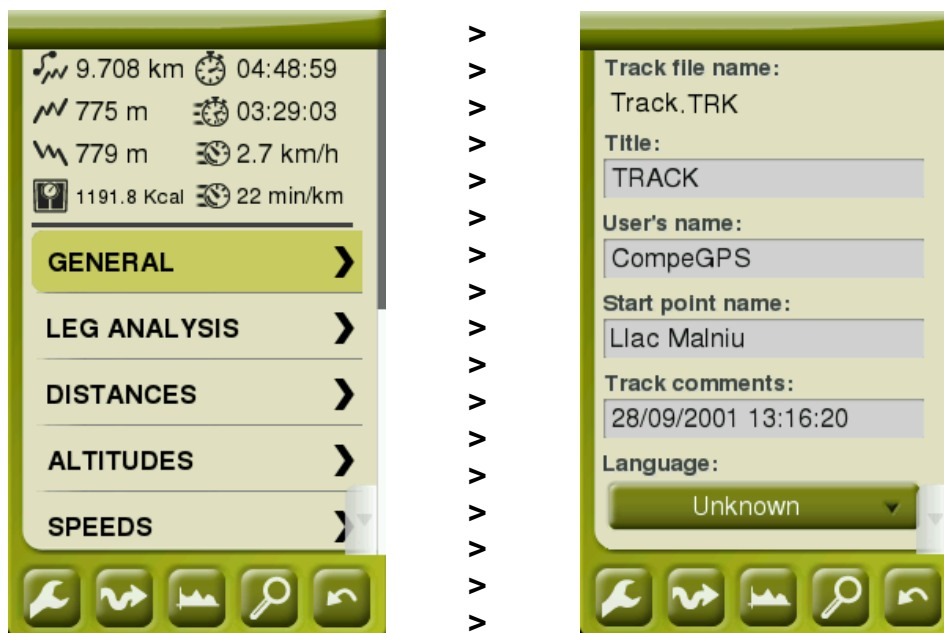

4. **Display subelements:** Some elements might have subelements (for example: waypoints or roadbook points), in order to display them press the icon of the opened element. In order to hide them, press again the icon of the element.

<div style="background-color: #d9ead3; padding: 5px; margin-bottom: 5px;"> <b>TRACK 1</b>   78.86 km  07:52:29  1189 m         </div> <div style="margin-bottom: 5px;"> <b>TRACK 2</b>   16.28 km  00:23:13  120 m         </div> <div style="margin-bottom: 5px;"> <b>TRACK 3</b>   16.03 km  00:33:13  320 m         </div> <div style="margin-bottom: 5px;"> <b>TRACK 4</b>   10.08 km  00:20:10  100 m         </div>	> > > > > > > > > > >	<div style="background-color: #d9ead3; padding: 5px; margin-bottom: 5px;"> <b>TRACK 1</b>   78.86 km  07:52:29  1189 m  <hr/> <b>Start</b>   522.1 km         </div> <div style="margin-bottom: 5px;"> <b>Arrival</b>   522.1 km         </div> <div style="margin-bottom: 5px;"> <b>TRACK 2</b>   16.28 km  00:23:13  120 m         </div> <div style="margin-bottom: 5px;"> <b>TRACK 3</b>   16.03 km  00:33:13  320 m         </div> <div style="margin-bottom: 5px;"> <b>TRACK 4</b>   10.08 km  00:20:10  100 m         </div>
---	---	---

5. **Close element:** Press the ticked square of the element.

<div style="background-color: #d9ead3; padding: 5px; margin-bottom: 5px;"> <b>TRACK 1</b>   78.86 km  07:52:29  1189 m  <hr/> <b>Start</b>   522.1 km  <hr/> <b>Arrival</b>   522.1 km         </div> <div style="margin-bottom: 5px;"> <b>TRACK 2</b>   16.28 km  00:23:13  120 m         </div> <div style="margin-bottom: 5px;"> <b>TRACK 3</b>   16.03 km  00:33:13  320 m         </div> <div style="margin-bottom: 5px;"> <b>TRACK 4</b>   10.08 km  00:20:10  100 m         </div>	> > > > > > > > > > >	<div style="background-color: #d9ead3; padding: 5px; margin-bottom: 5px;"> <b>TRACK 1</b>   78.86 km  07:52:29  1189 m         </div> <div style="margin-bottom: 5px;"> <b>TRACK 2</b>   16.28 km  00:23:13  120 m         </div> <div style="margin-bottom: 5px;"> <b>TRACK 3</b>   16.03 km  00:33:13  320 m         </div> <div style="margin-bottom: 5px;"> <b>TRACK 4</b>   10.08 km  00:20:10  100 m         </div>
---	---	---

### 3.3.3 Actions on elements

In data lists you are able to carry out several actions on elements using the buttons at the bottom of the list, available functions will depend on selected element:

- 'Map window'**, main application window.
- 'Page tools'** allows you to open specific configuration tools of the section where you are working in at the moment.
- 'Navigate element'** shows a trip preview allowing to configure your personal alarms before starting the navigation.
- 'Zoom to it'** shows that element on map (preview window) allowing you to zoom to it directly.
- Only for maps: 'Full list of maps'**, TwoNav lists all available maps. If not, it shows only the maps from your current area.



**Only for waypoints: 'Create new waypoint'**



**Only for routes: 'Create new route'**



**'Graph representation'** of the selected element.



**'Alarms'** configuration.



**'Name filter'**, elements which do not contain the entered combination of characters will be automatically hidden.



**'Default configuration'** returns to the default configuration.



**'Refresh'**, refreshes a list of items.

**Note:** Remember that you can also open the contextual menu to use more functions on specific elements.


### 3.3.4 Order elements

Elements contained in any list can be ordered or filtered in different ways, press 'Page tools':

- **Name filter:** Elements which do not contain the entered combination of characters will be automatically hidden.

Enter filter:

>>>>

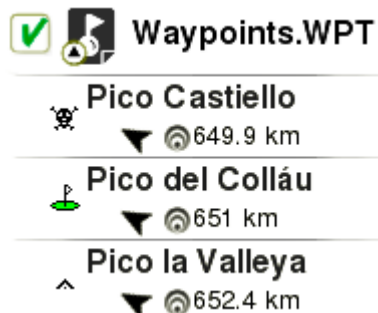

- **Sort by:** Set the rule to order the elements (by name, by proximity...).

	<b>Base</b>	▼ 652.3 km
	<b>Cuesta Capellu</b>	▼ 651.8 km
	<b>Ermita Sta María</b>	▼ 652.5 km
	<b>Las encinas</b>	▼ 652.5 km
	<b>Pico la Valleya</b>	▼ 652.4 km
	<b>Soberron</b>	▼ 650.5 km
	<b>Fuente Colláu</b>	▼ 649.9 km
	<b>Pico Castiello</b>	▼ 649.9 km

**Waypoints non sorted**  
original list of waypoints

>>>>

	<b>Pico Castiello</b>	▼ 649.9 km
	<b>Fuente Colláu</b>	▼ 649.9 km
	<b>Soberron</b>	▼ 650.5 km
	<b>Pico del Colláu</b>	▼ 651 km
	<b>Cruce</b>	▼ 651.3 km
	<b>Saldelapiedra</b>	▼ 651.7 km
	<b>Cuesta Capellu</b>	▼ 651.8 km
	<b>Base</b>	▼ 652.3 km

**Waypoints sorted by proximity**

### 3.3.5 2nd line data

TwoNav allows you the possibility to display more information for listed waypoints/tracks. Extra information will be presented in a 2nd line right after the name of the item with information such as date, distance, height, relative bearing arrow... Select the information that you want to display from 'Page tools > 2nd line data'.

**Track from Rutacastellon.TRK**

20-11-2007 00:07:35 2.530 km 20 km/h 3 min/km 213 Kcal

---

**Start**

173.5 km 20 km/h

---

**Arrival**

175.2 km 25 km/h

**Note:** Information contained in the 2nd line is only available for elements which have been saved using TwoNav 2.5 or Land/Air 7.3 software (or higher).


### 3.4 Data pages

During your navigation, TwoNav records many interesting data, this information (data fields) is usually very interesting to analyse and compare (speed, height, distances...). Open data pages from:

- 'Main menu > Discover > Data page'

- 'Page' key

Data pages offer you an additional space to the data bar where a larger number of data fields are displayed. When opening a contextual menu on a data field, you will find the available functions associated to that field.

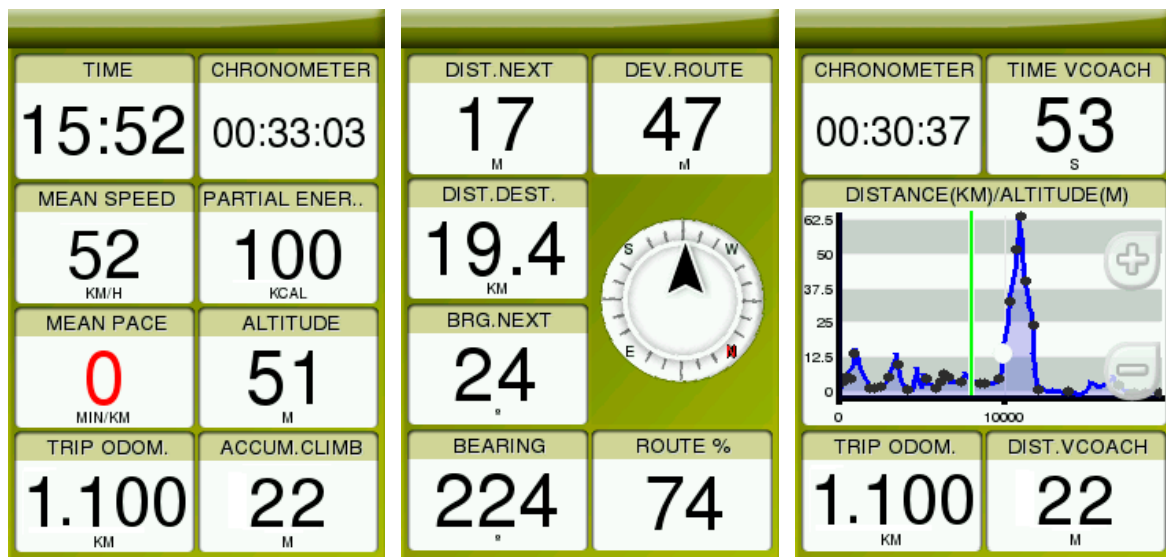


Data page >>>> Compass page >>>> Graph page

Data fields are configurable to have a different set for 'On-Road' or 'Off-Road' modes. Changes made in one mode will not affect the other.

The data fields contained in the data pages can be configured from 'Main menu > Settings > Fields & Buttons > Data fields'. You can also change a concrete data field by opening the contextual menu on it.

### 3.5 Contextual menu

TwoNav uses contextual menus to enter the most adequate functions for each moment using a quick shortcut: to open the contextual menu of any element press on it for one second.

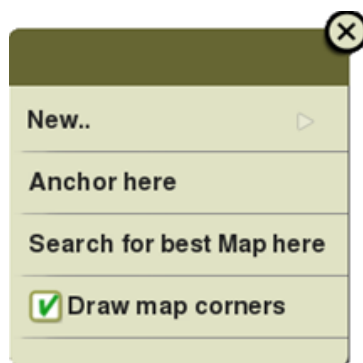



Depending on the element on which you open the contextual menu, you may enter different functions. You can access to the contextual menu of:

- **Map window**
- **Data fields**
- **Data lists**

## 4 NAVIGATION

### 4.1 Modes

TwoNav has 2 navigation modes which can be selected by pressing the tabs of the main menu:



The '**On-Road**' mode is based on door to door navigation, using a routable road map to automatically calculate the best route to destination.

*Note: 'On-Road' mode can only be used when a road maps is loaded.*



The '**Off-Road**' mode is based on the useage of previously created references (waypoints/routes/tracks). Route will not be automatically calculated, a straight line will link your current position to your destination.

*Note: 'Off-Road' mode can be used with any type map.*


**Important:** Before you start navigating, it is very important to set your vehicle so the system configuration and calculations will be adapted according to the selected vehicle ('Main menu > Settings > Vehicle').

### 4.2 Start

You can start a trip in several ways, your itinerary will be recorded when 'Triplog' is started:

- **'Main menu > Start!'**
- **'Triplog' function:** 'Main menu > Status > Start/Stop'.
- **Map window:** Open the 'Tool' mode and select 'Page tools > Start/Stop'.
- **List of elements:** Open the list of waypoints/routes/tracks ('Main menu > Data') and select the element that you want to navigate to.

**Note:** The 'Start/Stop' function will only offer to start a trip when it is not already started. Otherwise it will open the 'Pause' menu.

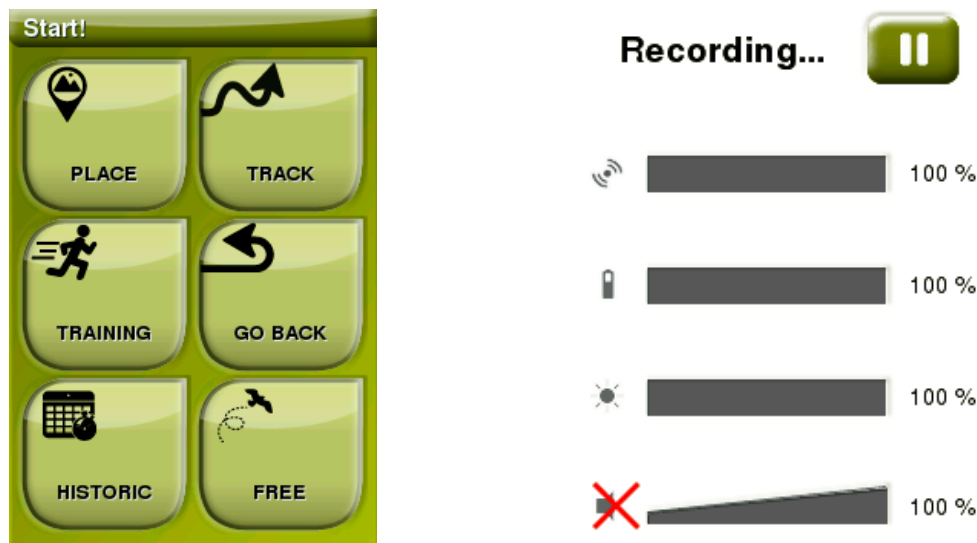


At 'Start!' menu you can select among several navigation types:

- **Place** (waypoint/geocache/coordinates/...)
  - **Waypoint:** Select a waypoint among the waypoints loaded or created by you.
  - **Favourites:** Create your own list of favourite places. By doing this, you will be able to navigate to them quickly. In order to manage your favourite places, press 'Edit' and create them.
  - **Route:** Select a route among the routes loaded or created by you.
  - **Geocache:** Select a geocache among the geocaches loaded or created by you.
  - **By map:** Select directly on the map the exact location where you want to navigate to.
  - **Bearing:** The destination point will be determined by setting the bearing and the distance that you are about to navigate.
  - **Address** (only available when road maps are loaded): Enter any address where you want to navigate to.
  - **POI:** Internet offers you an enormous database of points of interest (gas stations, hospitals, cash dispensers...) that can be downloaded and easily upload to TwoNav. Select the exact POI where you want to navigate to.

- **Coordinates:** Type the exact coordinates for your destination.
  - **Track** (select a track among the tracks loaded or created by you)
  - **Training** (specially designed to improve your performance)
    - **Free:** No destination is determined. You set your own movements with no restrictions.
    - **Time:** No destination is determined. Set the duration of your training by time and once your goal has been reached, TwoNav will show a warning message.
    - **Distance:** No destination is determined. Set the duration of your training by distance and once your goal has been reached, TwoNav will show a warning message.
    - **Trackattack:** TwoNav can use a previous track as a reference to compare your current performance. Choose a track and start the navigation. A simulation of that track will be played at its original speed, so you can compete against it (*'Virtual Coach'*). Trackattack is based on two pointers: your current position and an additional pointer, the *'Virtual Coach'*. Try to improve your results by comparing your current and past performances on map or in graphs in real time. Enable *'Virtual Coach'* from *'Main menu > Settings > Training > Virtual Coach'*.
- Note:** Some data fields are directly related to the *'Virtual Coach'* function:
- **TVC:** *Time to the 'Virtual Coach'*
  - **DVC:** *Distance to the 'Virtual Coach'*
- **Go back** (return to start point or home)
  - **Start point:** Go to the starting point of the recorded track directly from your present position (straight line to the starting point).
  - **Trackback:** The currently recorded track up to this moment is inverted, so you can navigate it in reverse. Inverted track file is recorded with a different name: *'Trackback1', 'Trackback2'...* By pressing *'Trackback'* the recorded track is inaltered and TwoNav keeps recording it.
  - **Home:** Go home directly (you have to previously set your home address from favourites management).

- **Historic** (list of destinations recently selected)
- **Free** (no destination is determined, set your own movements with no restrictions)

### 4.3 Follow indications

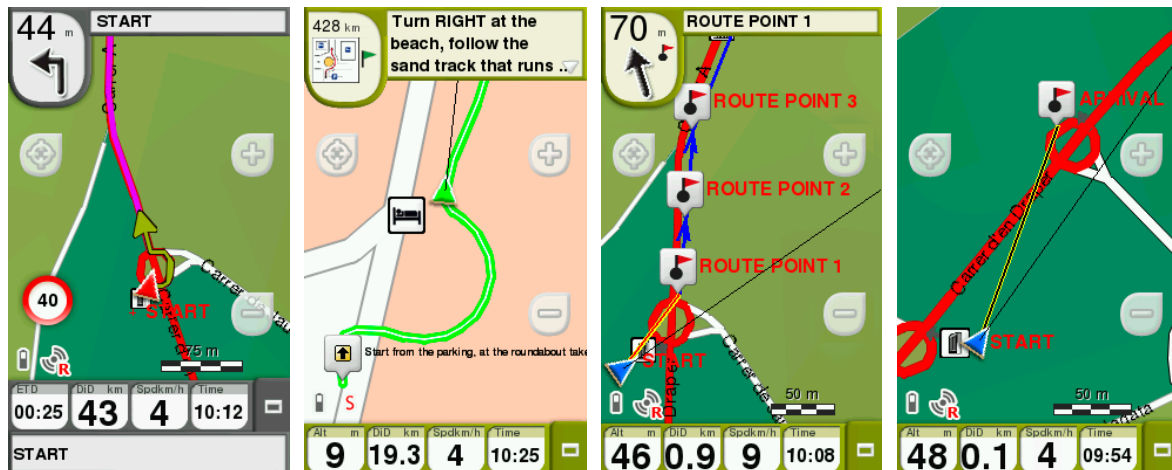

**'On-Road'  
navigation**

**Track  
navigation**

**Route  
navigation**

**Waypoint  
navigation**


Depending on the navigation type chosen, you will receive different indications to reach your destination:

- **Place:** A guide line will be drawn pointing to destination.
- **Track:** The track to follow will be highlighted and TwoNav will alert you if deviating from track.
- **Training:** Data page with specific fields will be shown according to the selected training mode. Moreover, 'Trackattack' mode will mark 'Virtual Coach' position on the map.
- **Go back:** 'Start point' and 'Home' get the same indications as 'Place' navigations while 'Trackback' indications are the same as if you were navigating a track.
- **Historic:** Indications will be the corresponding ones depending on the navigation type ('Place', 'Track' or 'Training').
- **Free:** Without indications.

## 4.4 Trip review

This function is basically a summary of your trip. 'Trip review' is very useful to analyse all kind of data recorded during your itinerary. Check 'Trip review' from: 'Page tools > Trip review'.

Among several categories of data, this page contains information such as distances, altitudes, elapsed times, speeds, track points, energy data...



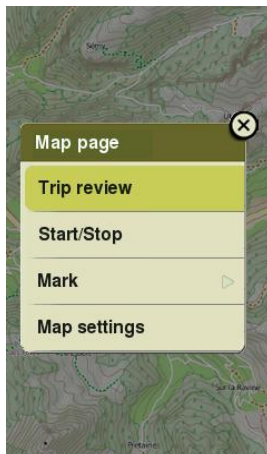


'Trip review' also offers you the possibility to compare parts of your trip thanks to graphic representations and leg analysis (sections of the same track divided by time, distance...).

**Note:** You can review the 'Trip review' of the track you have done so far at any moment from 'Page tools > Trip review'.

## 4.5 Set your alarms

Before you start navigating, at 'Trip review' you can set your own alarms warnings for data fields such as deviation from route, speed, altitude, slope, heart rate...

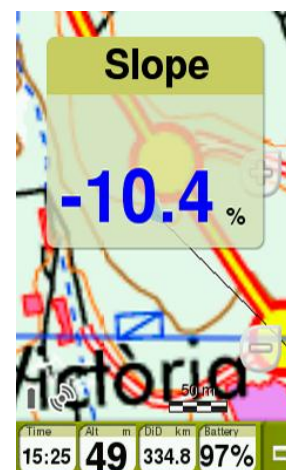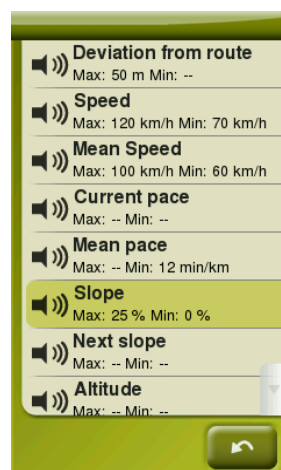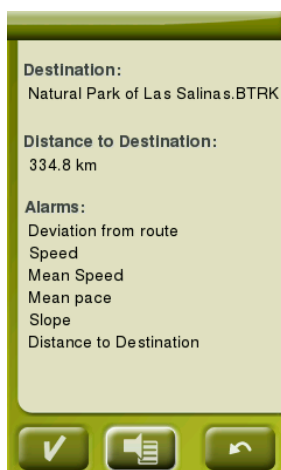


Alarm warnings will be automatically displayed during the navigation in a pop up window according to the preferences that you previously set on data fields.

Access full alarm configuration from *'Main menu > Settings > Alarms'*.

## 4.6 Pause & Finish Triplog

Once the trip is started and *'Triplog'* function is recording your itinerary, you can pause the recording at any moment, all you have to do is pause the *'Triplog'* from:

- **'Start/Stop'** (at the tool bar)
- **'Main menu > Status > Triplog'**
- **'Page tools > Start/Stop'**

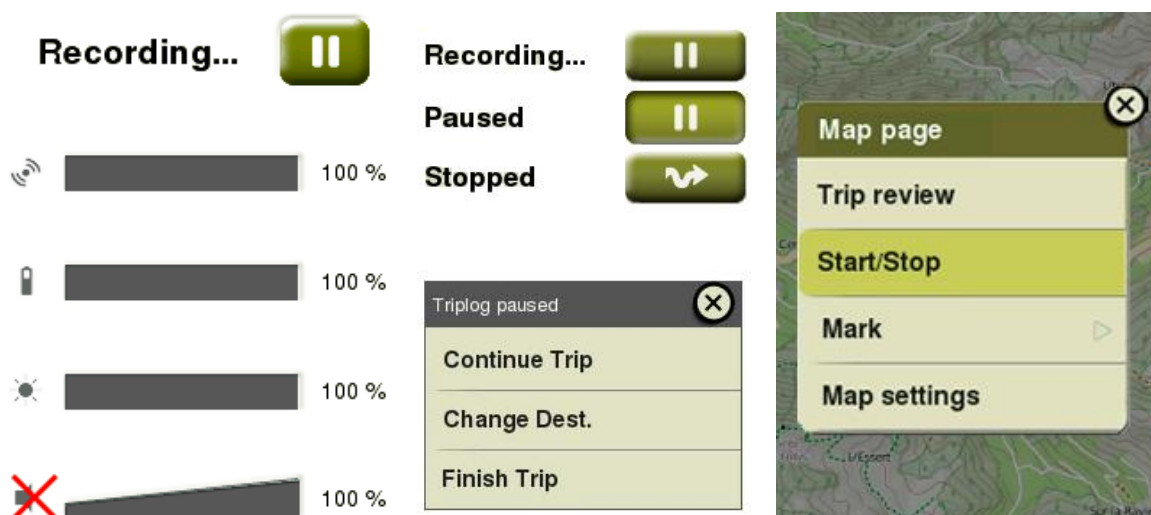

**Important:** Data fields, recorded track and other functions such as *'Virtual Coach'* are synchronized, so if you press *'Pause'*, you pause all counters until the trip is resumed again.

With *'Triplog'* paused, you will have to decide the next step of your trip:

- **Continue the trip:** *'Triplog'* keeps recording again.
- **Change destination:** Keep recording current *'Triplog'* or start new one.
- **Finish the trip:** *'Triplog'* will be stopped.

When your destination is finally reached, TwoNav will display an alert and you will be asked to pause the 'Triplog'. Once done, 'Trip review' will be automatically shown with relevant information of the trip.

**Important:** When starting a new navigation or changing between 'On-Road' and 'Off-Road' modes, you will be asked to re-start 'Triplog' function.

## 4.7 Recording the track (Tracklog)

The track of your trip is saved at 'Tracklog' folder. But you can directly review your recorded tracks from the list of tracks ('Main menu > Data > Tracks > Tracklog').

A security system has been added to TwoNav in order to avoid losing tracks in case you forget to start 'Triplog' function. If the option 'Save discarded Tracklog in trash' ('Main menu > Settings > Advanced') is enabled, when options 'Pause' or 'Finish trip' are pressed, the following movements will be automatically recorded as backup track copy inside 'TwoNavData/Data/Tracklog/Trash' folder.

**Note:** If you record more than one track at the same day, file's names will be distinguished by a number at the end of the file name. This number identifies the order in which the tracks were created (for example: '2008-12-15-01.TRK', '2008-12-15-02.TRK'...). You can rename both the tracks previously saved as the track currently being recorded by using the track properties or 'Save' function.

## 5 MAPS

### 5.1.1 What is a map?

With TwoNav you are able to manage a great variety of maps. There are different basic types of maps:



**Vectorial:** Road maps. With a vectorial map loaded you will be able to unlock the 'On-Road' mode.



**Topo:** Topographic maps.



**3D relieves:** Elevation maps. \*.CDEM maps contain information related to the altitude of the ground. With a relief map loaded you might display the maps in 3D+.



**Marine charts:** These maps have specific information related to nautical activities (points of interest POIs, depth data fields, alarms...). All you have to do is update the operating system of the device and install the marine charts.

**Note:** Check how to update the operating system of your device at 'FAQs' section at [www.CompeGPS.com](http://www.CompeGPS.com)



**Locked map:** Map not activated. In order to start working with it, a license code is required.

TwoNav automatically opens the best map based on your current position. If you prefer to manage your maps manually, disable the 'Auto-open maps' function from 'Main menu > Settings > Map > Automap'.

**Note:** CompeGPS offers you a wide range of maps from all around the world to complement your cartography, just visit <http://www.CompeGPS.com>

### 5.1.2 Supported formats

TwoNav can open the following map formats:

- **\*.RMAP/\*.RTMAP:** CompeGPS' raster map format
- **\*.ECW:** Raster map format
- **\*.VMAP/\*.MPVF:** CompeGPS' vectorial format
- **\*.IMP:** Calibration file requiring image file
- **\*.MAP:** Calibration file requiring image file
- **\*.CDEM:** 3D relief map
- **\*.NV2:** Navionics' marine chart

See your list of available maps from 'Main menu > Data > Maps' (all maps available at 'TwoNavData/Maps' folder for your present position).

**Important:** Remember that more map formats can be imported and converted to the supported formats from Land/Air software (Windows/Mac platforms), more information at <http://www.CompeGPS.com>

### 5.1.3 Properties

Enter the properties of a map from: 'Main menu > Data > Maps > Press the name of any opened element':

- **Name:** Name of the map file.
- **Description:** Short description about the map by the provider.
- **Type:** Type of map.
- **Scale:** Meters of land per each map pixel.
- **Resolution:** Meters that fit into the rectangles that make up the landscape. The more meters fitting into a square, the more detailed map.



- **Primary:** In case of conflict between maps, if this field is marked, other maps will be adapted to this one.
- **Projection:** Projection used to calibrate the map. There are several types of cartographic projections classified depending on the areas they cover.
- **Extension:** Width and height of the area covered by the map.
- **Lines/Columns:** Number of lines/columns the landscape is made up of (altitude/width)
- **Datum:** Used to translate the positions of elements (waypoints/tracks/routes) to the exact position on the earth. Datum systems is needed because the earth is an imperfect ellipsoid.
- **Memory used:** RAM memory used by the uncompressed map.
- **Image:** Name and size of the image used to produce the resulting map as well as the color quality of the map.
- **Transparent:** Regulate the level of transparency of the map allowing you to work with several maps at the same time overlapping them in different layers.
- **Calibrating points:** Number of points used to calibrate the map.
- **Far/Near zoom:** Zoom configurations set by default.
- **Errors received:** Comments regarding the map.

#### 5.1.4 Multimaps

With TwoNav you can load more than one map at the same time. But if you have two maps for the same area displayed on the interface, one of them can be displayed at the top by superposition, select the map you wish to be placed at the top/bottom and press: *'Contextual menu on the map > Multimaps > Bring to front/Send to back'*.

## 6 WAYPOINTS/ROUTES/TRACKS

In addition to maps, you can also work with different position references for guidance: waypoints (separate points), routes (a sequence of waypoints), tracks (itinerary footprint)...

You can get these references by creating them yourself or from other sources


(friends, webs, meeting planners...). Manage your own waypoints/routes/tracks from 'Main menu > Data'.

## 6.1 Descriptions

### 6.1.1 Waypoints

#### 6.1.1.1 What is a waypoint?

The waypoint is a point defined by a geographical position, latitude and longitude coordinates and in most cases altitude, used by the GPS navigation tools. Waypoints are represented on screen as points with name or representative icon.

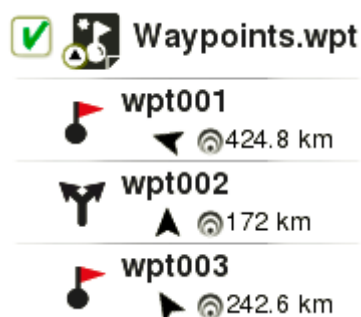

The waypoints are kept inside Waypoints Files (usually in \*.WPT format), so a Waypoints File may contain one or more waypoints.

#### 6.1.1.2 Supported formats

TwoNav can open the following waypoint formats:

- \*.WPT
- \*.BWPT
- \*.LOC
- \*.GPX
- \*.KML
- \*.KMZ

See your list of available waypoints from 'Main menu > Data > Waypoints' (all waypoints available at 'TwoNavData/Data').

**Important:** Remember that more waypoint formats can be imported and converted to the supported formats from Land/Air software (Windows/Mac platforms), more information at <http://www.CompeGPS.com>

#### 6.1.1.3 Properties

Enter the properties of a waypoint/waypoint file from: 'Main menu > Data > Waypoints > Press the name of any opened element':

- **General:** General properties such as: name of the element, short name, element description...

- **Coordinates:** Geographical position of the waypoint.
- **Position:** Values such as: altitudes, bearing, proximity...
- **View:** Properties that are displayed on the map window such as: color, text, zoom level (element is displayed according to a scale value)...
- **Associated:** Attach image/sound/text/video files to this item. These files will be displayed during the navigation when reaching the element.

#### 6.1.1.4 Active Waypoints File

All waypoints must be contained in a waypoints file. You can have several waypoints files opened, but created waypoints will be always saved inside an Active Waypoints File (AWF).

By default, the Active Waypoints File is called 'Waypoints.WPT', but you can set as Active Waypoints File any other file (marked with an asterisk): select 'Set as active waypoint' option. When a new waypoints file is created, it will be automatically set as active.


By pressing 'Reset' on any Active Waypoints File you will delete all the waypoints contained in that specific Active Waypoints File.

**Note:** Full customization of Active Waypoints Files can be check at: 'Main menu > Settings > Advanced > Active waypoints mode'.

### 6.1.2 Routes

#### 6.1.2.1 What is a route?

A route is a group of waypoints ordered in a predetermined way. It is a way of navigating that allows for planning a course from one place to another going through various waypoints. Routes are used when it is not possible to reach a place in a direct way (in straight line).

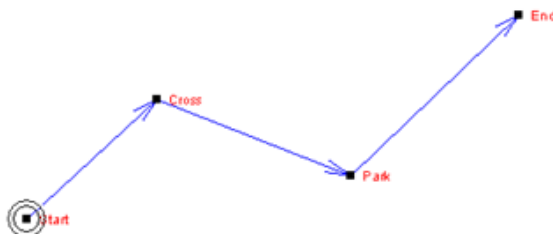

#### 6.1.2.2 Supported formats

TwoNav can open the following route formats:

- \*.RTE
- \*.GPX

See your list of available routes from 'Main menu > Data > Routes' (all routes available at 'TwoNavData/Data').

**Important:** Remember that more route formats can be imported and converted to the supported formats from Land/Air software (Windows/Mac platforms), more information at <http://www.CompeGPS.com>

### 6.1.2.3 Properties


Enter the properties of a route from: 'Main menu > Data > Routes > Press the name of any opened element':

- **General:** General properties such as: name of the element, short name, element description, covered area and distance, altitudes as well as properties that are displayed on the map window such as: color, text, type of line...
- **Associated:** Attach image/sound/text/video files to this item.

### 6.1.3 Tracks

#### 6.1.3.1 What is a track?

A track is a group of points ordered by time, where each point contains information on the position, time and date, coordinates and, in most cases, altitudes.

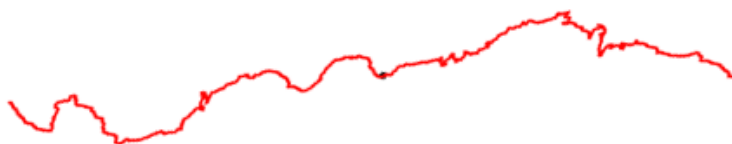

#### 6.1.3.2 Supported formats

TwoNav can open the following track formats:

- \*.TRK
- \*.IGC
- \*.PLT
- \*.GPX
- \*.KML
- \*.KMZ

See your list of available tracks from 'Main menu > Data > Tracks' (all tracks available at 'TwoNavData/Data').

**Important:** Remember that more track formats can be imported and converted to the supported formats from Land/Air software (Windows/Mac platforms), more information at <http://www.CompeGPS.com>

### 6.1.3.3 Properties

Enter the properties of a track from: 'Main menu > Data > Tracks > Press the name of any opened element':

- **General:** General properties such as: name of the element, short name, element description, classification...
- **Leg analysis:** Analyse sections of the same track divided by time, distance...
- **Distances:** Distance values recorded by GPS device such as: projected distance (distance covered horizontally), distance with altitudes (real distance covered outlining the orography of the ground), linear distance (straight line between first and last point of the track), covered area...
- **Altitudes:** Altitude values recorded by GPS device such as: maximum/minimum altitude, slope, accumulated climb/descent, height differences...
- **Speeds:** Speed values recorded by GPS device such as: maximum speed, mean speed, pace, vertical speed...
- **Date/Time:** General properties such as: date, departure/arrival time, duration, stopped/moving time...
- **View:** Properties that are displayed on the map window such as: color, text, type of line...
- **Track points:** Information related to the number of points contained in the track, the recording interval of points, extra data fields (additional track data)...
- **GPS:** Information related to the GPS device that recorded the track.
- **Energy:** Energy values recorded by GPS device such as: mass, age, gender, mean power, climbing mean power...
- **Sensors:** Information related to cadence, speed and heart rate recorded by the GPS device using external ANT+™ sensors.
- **Associated:** Attach image/sound/text/video files to this item. These files will be displayed during the navigation when reaching the element.

## 6.2 Basic operations

### 6.2.1 Creation of waypoints/routes/tracks

#### 6.2.1.1 On the map

1. On map window, do a long press at the exact location where you want to create the reference and open the contextual menu.
2. Select 'New' and choose the type of item that you want to create (waypoint/route/track).
3. Fill in the basic information of the item.
4. If you create a route/track, click successively on the map in order to create the following points (waypoints are only based on single point with no union between them). Once finished press 'Close edition' at the toolbar.

#### 6.2.1.2 From data lists

##### 6.2.1.2.1 Waypoints lists


From the list of waypoints ('Main menu > Data > Waypoints') press 'Create new waypoint' and select among several ways to set the position for the newly created waypoint.

- **Address:** Enter the address using the database of a vectorial map.
- **Bearing:** Destination point will be determined introducing bearing and distance values.
- **By map:** Map window will be opened, select the exact location where you want to create the waypoint.
- **Coordinates:** Type the exact coordinates of the newly created waypoint.
- **Favourites:** Select any of your waypoints categorized as favourites.
- **Present destination:** Final point of your present navigation.
- **Present position:** GPS position in which you are when creating the new waypoint.
- **Waypoint:** Add a waypoint from a waypoints file. All you have to do is select the waypoint inside the concrete waypoints.

### 6.2.1.2.2 Routes lists

From the list of routes ('Main menu > Data > Routes') press 'Create new route'. The new route file will contain no waypoints, you will have to add them by pressing 'Create new waypoint'. Select among several ways to set the position for the newly created waypoints (*check other chapters in order to create individual waypoints*).


### 6.2.2 Move position of waypoints

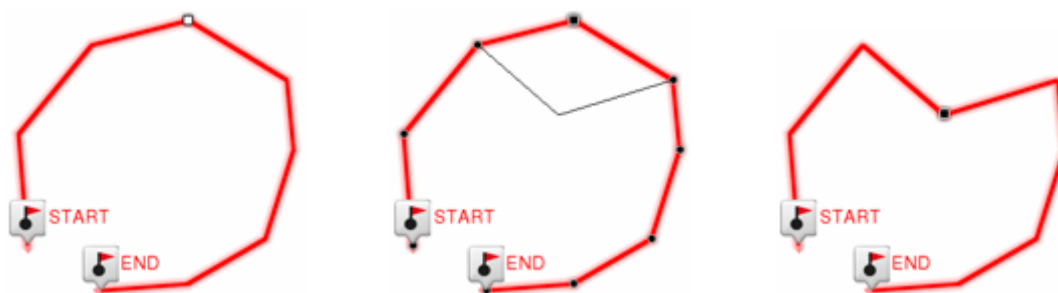

1. Open the contextual menu on the waypoint and select 'Edit'.
2. Drag the waypoint to the exact point where you wish to place it.
3. Once finished press 'Close edition' at the toolbar.

**Note:** You can also move the position of waypoints by modifying their coordinates. Enter the properties of the waypoint and set the new coordinates, checking that the datum and the projection are correct.

### 6.2.3 Add waypoints to a route/track

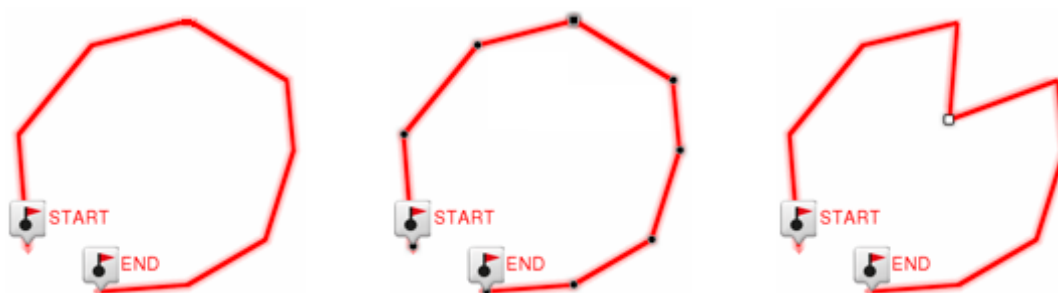


1. Open the contextual menu on the item and select 'Edit'.
2. Select the waypoint after which you want to add a new waypoint doing a short click.
3. Press the exact point where you wish to create the new waypoint.
4. Once finished press 'Close edition' at the toolbar.

**Note:** When entering the editor, the selected waypoint will be the last, so if you press on the map, waypoints will be added to the last part of the element.

## 6.2.4 Graph representation of routes/tracks

Display a graph representation of your route/track, just enter the properties of the element and press the button 'Graph representation'. These are the available functions on graphs:



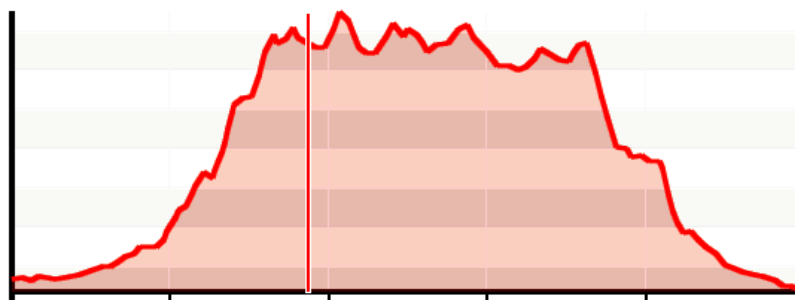




- **Guiding Y axis:** Bar serving as moving axis.



- **Moving graph:** Use 'Zoom' buttons to sections of the graph with more detailed precision (graph scrolling can also be applied by dragging the graph up and down as well as laterally).
- **Automatic re-center:** Press 'Re-center' button to automatically recenter the graph.

## 6.2.5 Add associated files to waypoints/routes/tracks

Your items can have associated files such as images, sounds, texts... Check the associated files of your elements from data lists ('Main menu > Data').

<input checked="" type="checkbox"/>  <b>Track</b> 7.712 km 1275 m	
 <b>Start</b> 242 km	1:
 <b>Alarm2.wav</b>	<input type="text" value="Alarm2.wav"/> 
 <b>Arrival</b> 244.3 km	2:
 <b>mapkeys.mkey</b>	<input type="text" value="mapkeys.mkey"/> 
	3:
	<input type="text"/>

Moreover, if individual waypoints have associated files, you will be able to reproduce their associated files:



- **Automatically:** When current GPS position is inside the radius of the waypoint. Automatic play can be configured from 'Main menu > Alarms > Waypoints'.

*Note: If radius of a waypoint is not defined, 'Default radius for waypoints' parameter will be taken into consideration.*

- **Manually:** When current GPS position is inside the radius of a waypoint with associated file, 'Infocurrent' will show a symbol. Associated file will be reproduced when clicking on it.

**Important:** Files can be easily associated using Land/Air software (Windows/Mac platforms), more information at <http://www.CompeGPS.com>

**Note:** Rich-formatted HTML texts can be displayed on-screen using certain HTML tags. This function has been specially designed for e-Roadbooks, geocaching and routes. You only need to associate a \*.HTML files using certain HTML-formatted styles (such as font size, font color, title levels, text in bold, text in italics, text underlined, background colour, text alignment, attached images...)

## Sagrada Família (Barcelona)



The Basilica of the Sagrada Família was the inspiration of a Catalan bookseller, **Josep Maria Bocabella**, founder of Asociación Espiritual de Devotos de San José. After a visit to the Vatican in 1872, Bocabella returned from Italy with the intention of building a church inspired by that at Loreto.

### 6.2.6 Navigate to a waypoint/route/track


You can navigate to any of your references from:

- **'Main menu > Start!'**
- **Data lists ('Main menu > Data')**: Select the item that you want to reach and press 'Navigate'.
- **Map window:** Find the item that you want to reach, open its contextual and press 'Navigate'.

Navigation towards to the first waypoint will be activated from your current position. If navigating routes/tracks, once the first point has been reached, you will be guided to the second one, and so on.

- **'Off-Road' mode:** A straight line will be displayed from your current position to the next waypoint.
- **'On-Road' mode:** TwoNav will try to automatically calculate a sub-route through the streets in order to orientate you in detail with sound indications.

### 6.2.6.1 Navigation elements

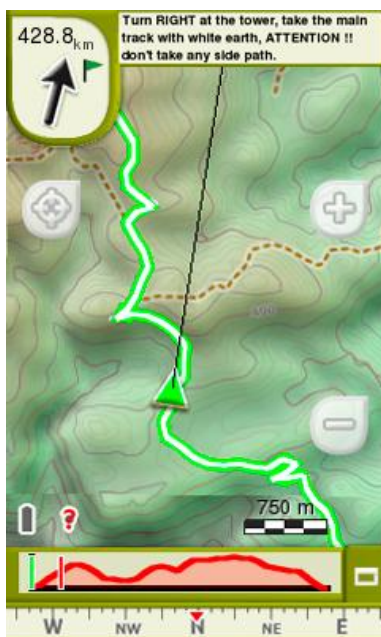

- **Nextevent:** Information related to the next position (direction and distance). GOTO arrow shows direction of the following section of the track.

This parameter is the distance to calculate tangent to give direction. Take the direction of this arrow as a reference to keep going your way.

**Note:** If you are over 50 metres far from the track, the GOTO arrow will indicate the perpendicular to the track instead of the tangent. At this distance it will be considered that you are off the way that you should be following and that you must go back to it in the most direct possible way (perpendicular).

- **Infocurrent:** Information related to present position.
- **Infonext:** Information related to next events.
- **Guide line:** Your position will be joined to the track by means a perpendicular line between them. When you are over 50 metres from the track, this line will turn red.

**Note:** If the track has over 100 points, the guide line will indicate the closest point to the track instead of the perpendicular.

## 6.3 Advanced operations

When waypoints/routes/tracks are created you can change and edit several parameters from their properties window. Once your changes are done, save them pressing 'Save'.

## 6.3.1 Waypoints

### 6.3.1.1 Modify for all waypoints

If any of these properties is modified, it will be applied for all waypoints at the same time.

### 6.3.1.2 Reset

By pressing 'Reset' at any Active Waypoints File (AWF), you will delete all the waypoints of that specific active file.

## 6.3.2 Routes

### 6.3.2.1 Modify for all waypoints

If any of these properties is modified, it will be applied for all waypoints at the same time.

### 6.3.2.2 Change the order of the waypoints in a route

In order to change the order of the waypoints of a route, open the contextual menu on the waypoint that you want to move and select 'Move up' or 'Move down'.

### 6.3.2.3 Invert a route

In order to display a route in the opposite sense to the default one (the beginning at the end and viceversa), open the contextual menu of the route and select 'Tools > Invert the route'.

### 6.3.2.4 Convert a route into a track

In order to change a route into a track, open the contextual menu of the route and press 'Tools > Change into a track'.

## 6.3.3 Tracks

### 6.3.3.1 Import altitudes

If you have a 3D relief map loaded (\*.CDEM file), TwoNav will assign to each point of the track its altitude considering the information of the loaded relief map.

### 6.3.3.2 Delete stopped points start/end

Track will omit the repetitive points from the beginning and the end where you stopped before and after making the track.

### 6.3.3.3 Reduce the number of points

Track will be drawn by keeping the shape of the original track but according to the number of points that you introduce.

### 6.3.3.4 Assign time/speed

Determine a time for departure and a constant speed so that TwoNav will calculate the estimated time of arrival for each point in the track.

### 6.3.3.5 Delete aberrant points

Points deviating excessively from the track will be considered errors, and so deleted.

### 6.3.3.6 Invert track

In order to display a track in the opposite sense to the default one (the beginning at the end and viceversa), open the contextual menu of the track and select '*Tools > Reverse the track*'.

### 6.3.3.7 Convert a track into a route

In order to change a track into a route, open the contextual menu of the track and press '*Tools > Change into a route*'.

### 6.3.3.8 Track legs

#### 6.3.3.8.1 Create legs

- **Create separated legs on an existing track:** You may split the track in several legs by opening the contextual menu on the point that divides the two selected legs '*Legs > Change leg here*'.

At this moment, the leg closer to the end of the track will change colour to highlight the difference between the two legs. The initial leg will remain the original colour of the track.

- **Create new legs on the present track:** If during the recording of the present track you activate a pause from the '*Status*' window, when starting recording again, the new points will keep being recorded in the same file as before the pause, but a new leg with the new points will be generated automatically. This way, you will be able to make out easily the parts of the present leg and apply independent modifications on them.

If there is a distance from the moment you paused the recording of the track until you activated it again, the empty space passed in this time will be visible on its display.

### 6.3.3.8.2 Operations with legs


If you open the contextual menu on a track leg in the navigation window from 'Legs' option, you will be able to check the properties of the leg, analyse it, change into a new leg...

## 7 ADDITIONAL FEATURES

### 7.1 Simulate

See a representation of your itinerary before starting the navigation. Choose your type of simulation according to your needs:

- **A → B (only in 'On-Road' mode):** Proposed route will go from point A to point B. From 'Main menu > Discover > Simulate', choose two points (waypoint/POI/address/favourites/...).

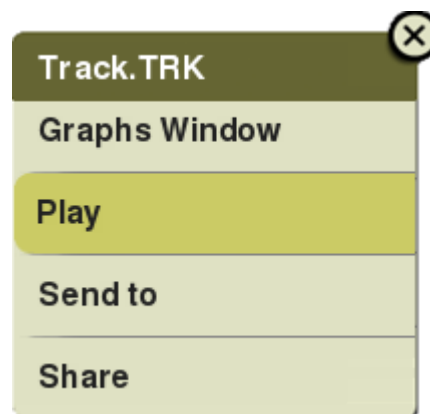

- **Reproduce track:** Animation of the itinerary will be displayed. During the animation, the simulated position will become the prevailing one instead of your current position, position will be centred on it and the statistics will be related to it. Do a track simulation from:
  - **List of tracks:** Open the contextual menu on the track that you want to simulate and press 'Play'.
  - **Map window:** Find the track that you want to simulate, open its contextual and press 'Play'.

With the simulation on, the simulated position will be displayed with a different icon to distinguish it from your current position. At the same time, some tools to manage the simulation will appear at the tool bar:



- **Pause:** Pause function. Press it again to resume the simulation.
- **FF/RW:** Accelerate the simulation. Press it again to apply normal speed.
- **FF to next/RW to prev.:** Jump to next event.
- **Stop:** Stop the simulation (*'Main menu > Discover > Stop simulation'*).

## 7.2 Geocaching

### 7.2.1 What is geocaching?

TwoNav provides you all the necessary tools to practice paperless geocaching. Geocaching tools are centralized in *'Menu > Discover > Geocaching'*. Work with geocaching files like as any other waypoints file, although geocaches include extra information comparing to normal waypoints. Among information, you can check notes from other users (*logs*) or even create your own notes.

### 7.2.2 Supported formats

In order to be fully compatible with paperless geocaching, waypoints' file needs to have geocaching extensions providing information about geocache (description, difficulty, terrain...).

TwoNav can open the following geocaching formats:

- **\*.WPT**
- **\*.BWPT**
- **\*.GPX**

**Note:** *\*.LOC files will also be listed when choosing a geocaching destination, but these files cannot be considered as fully compatible with geocaching because they do not include geocaching extensions, so extra information as description or field notes will not be available.*

### 7.2.3 Create field notes

Logs:



Status:



Comment:

Date:

In addition to see field notes of other users, you can create your own field notes regarding to any geocache:

- **Geocache currently set as destination:** *'Main menu > Discover > Geocaching > Field notes'*.
- **Any geocache:** *'Main menu > Data > Waypoint > Properties > Field notes'*.

Fields notes are saved inside *'Geocache\_visits.txt'*. This file allows you to easily upload your fields notes to any geocaching server from internet (for example: [www.geocaching.com](http://www.geocaching.com))

#### 7.2.4 Set status for geocaches

From *'Main menu > Settings > Display > Geocaching > Hide found geocaches'*, you will be able to show/hide current geocaches.

Geocaches which have been labelled as *'Found geocache'*, will not appear in the list. By doing this, there will be no need to see geocaches that were previously found.


#### 7.2.5 Add associated files with Land/Air

Geocaches can have associates files such as images, sounds, texts... They can also be reproduced from *'Main menu > Discover > Geocaching'*, after setting geocache as destination.


Although is not possible to edit geocaching files from TwoNav, edition can be easily done from Land/Air software (Windows/Mac platforms), more information at <http://www.CompeGPS.com>

Follow next steps to associate files to a geocaching file using Land/Air software:

1. Install Land/Air in your computer (Windows/Mac platforms), more information at <http://www.CompeGPS.com>
2. Start Land/Air software and open geocaching files. Geocaches will appear at *'Waypoints'* section at the data tree.
3. Add files to geocache using one of these methods:
  - **Drag files from Windows/Mac explorer:** Keep the left mouse button pressed on the file and drag it to the waypoint.

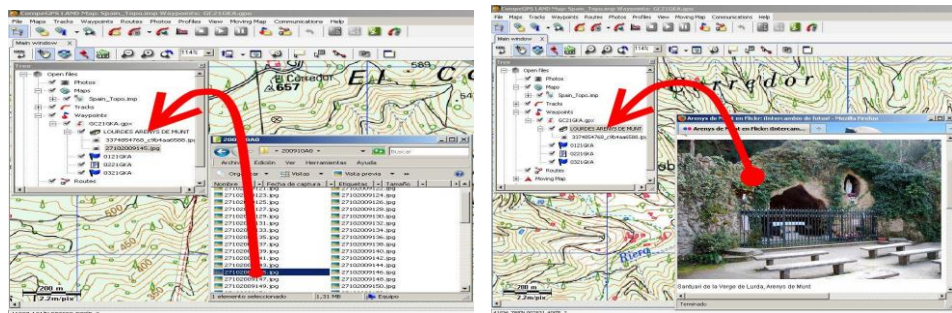

- **Drag files from internet browser:** Drag them directly from browser. Just drag the image to waypoint at the tree.
  - **Add them manually:** From 'Associated' section at waypoint properties.
4. Save the resulting file in \*.WPT format: Open contextual menu on the waypoints file and select 'Save'.
  5. Send the resulting file to your TwoNav device: Use 'Send to' function.

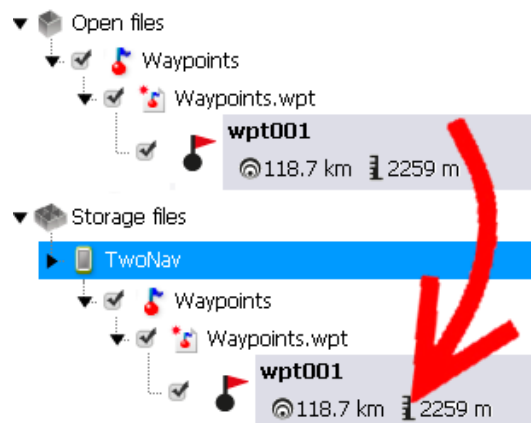

## 7.2.6 Navigate a geocache

You can navigate to a geocache from:


- **'Main menu > Start!'**
- **'Main menu > Discover > Geocaching > Navigate'**
- **List of waypoints:** Select the geocache that you want to reach and press 'Navigate' button.
- **Map window:** Find the geocache that you want to reach, open its contextual and press 'Navigate' button.



## 7.3 e-Roadbook

### 7.3.1 What is an e-Roadbook?

A roadbook is a diagram tool commonly used by rally co-drivers and walkers to navigate an uncertain terrain. Roadbooks contains several pages of information: charts, GPS coordinates, written instructions, manoeuvres...

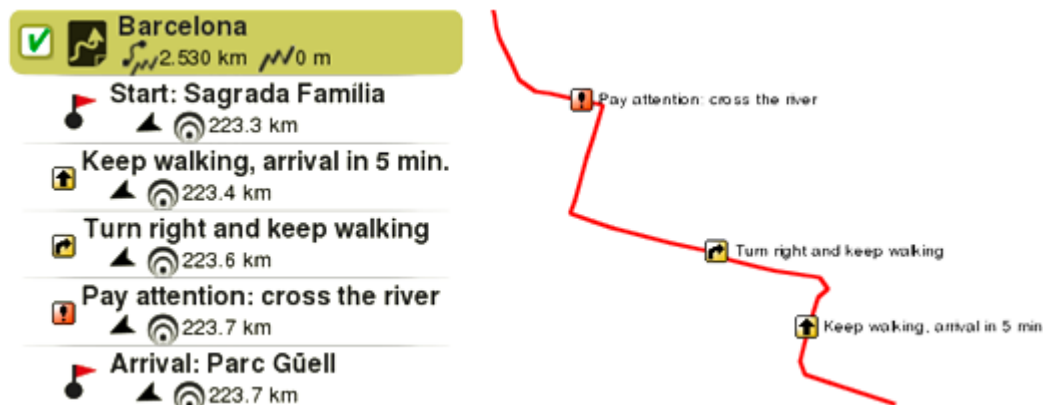

e-Roadbooks, contain all this information in digital format with no need to read indications in a book, TwoNav will display all manoeuvres in the screen.

### 7.3.2 Supported formats

TwoNav can open the following roadbook formats:

- \*.TRK
- \*.BTRK

**Important:** Remember that more roadbook formats can be imported and converted to the supported formats from Land/Air software (Windows/Mac platforms), more information at <http://www.CompeGPS.com>

### 7.3.3 Create an e-Roadbook with Land/Air


In order to make an e-roadbook you need several essential tools:

- A track.
- The **book** where items are stored with the images and descriptions.
- **Land/Air** software (Windows/Mac platforms).

Follow next steps to create an e-Roadbook file using Land/Air software:

1. Install Land/Air in your computer (Windows/Mac platforms), more information at <http://www.CompeGPS.com>


2. Start Land/Air software and open the track file. Track will appear at 'Track' section at the data tree.
3. Once opened, open its contextual menu and select 'Edit roadbook'.

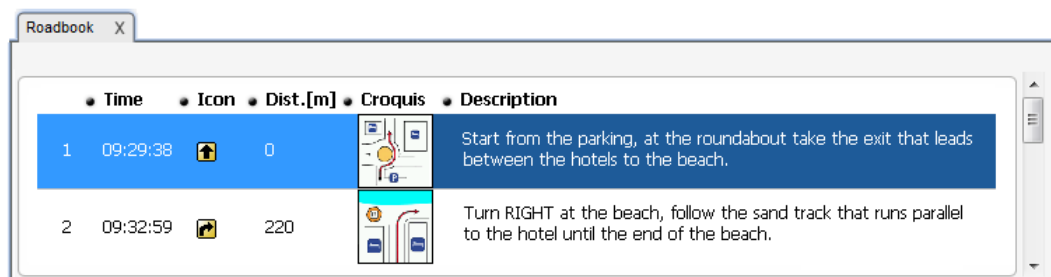

4. A new window will appear containing all waypoints of the track. Place the mouse at the exact location where there is something to highlight and open the contextual menu on that point, press 'Create a roadbook point here'.
5. Now you can edit the roadbook point with relevant information:
  - **Description:** Write important manoeuvres, information about monuments, notable facts...
  - **Croquis:** Associate image showing navigation signs for an easy orientation.

**Important:** To associate images you should edit, cut and save them using a suitable format (\*.BMP) and size (128x128 pix.), so that they can fit TwoNav interface. Search for the right image editor to edit pictures.

6. Repeat this action for each roadbook point that you want to highlight.
7. If you wish, add files to the waypoints of the roadbook using one of these methods:
  - **Drag files from Windows/Mac explorer:** Keep the left mouse button pressed on the file and drag it to the waypoint.

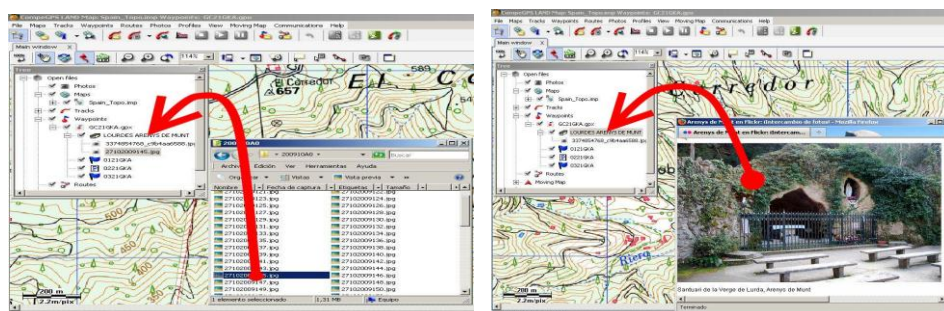


- **Drag files from internet browser:** Drag them directly from browser. Just drag the image to waypoint at the tree.
- **Add them manually:** From 'Associated' section at waypoint properties.

8. Save the resulting file in \*.BTRK format: Open contextual menu on the track file and select 'Save'.

9. Send the resulting file to your TwoNav device: Use 'Send to' function.

**Important:** Do not delete the e-Roadbook in \*.TRK format since the resulting \*.BTRK is not editable. If you want to change any parameter, modify the \*.TRK file and save it again in \*.BTRK format.

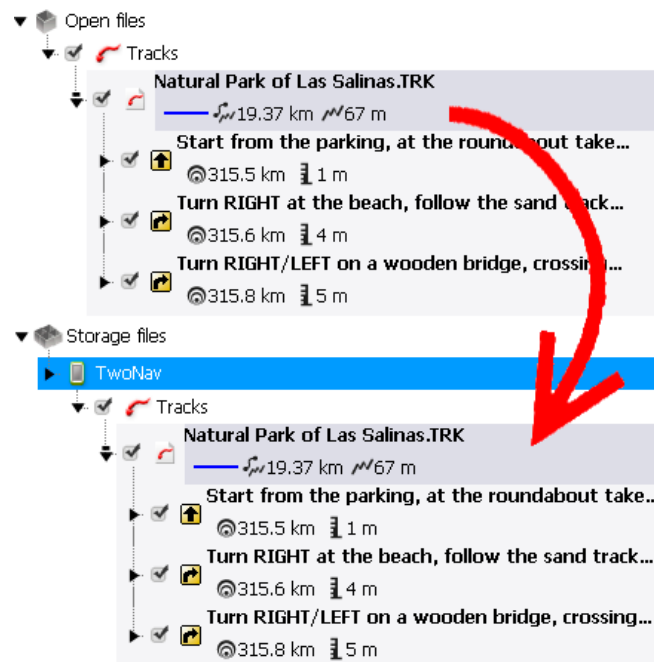

### 7.3.4 Navigate an e-Roadbook

Like any other track, you can navigate an e-Roadbook from:

- **'Main menu > Start!'**
- **List of tracks:** Select the e-Roadbook that you want to reach and press 'Navigate' button.
- **Map window:** Find the e-Roadbook that you want to reach, open its contextual and press 'Navigate' button.

## 8 SETTINGS

### 8.1 System

#### 8.1.1 Device

##### 8.1.1.1 Default settings

Re-establish all the settable parameters to their initial status. All the options that have been manipulated will be modified and set as default.

##### 8.1.1.2 Status report

When 'Status report' is pressed, a \*.ZIP file containing technical information of the current status of the application is created at 'TwoNavData/Data'.

Create a 'Status report' in order to help the technical support department to solve any problem of TwoNav application, please contact the on-line technical support department of CompeGPS at <http://Support.CompeGPS.com>

##### 8.1.1.3 About

Check which TwoNav version you have in the device.

**Note:** In order to update the TwoNav software of your device or solve any kind of problem with CompeGPS' technical team, it is very important to know the exact version of TwoNav that your device is working with.

##### 8.1.1.4 Activation information

- **Status:** TwoNav application registered/non-registered.
- **User's name:** Registered user. If device has internet connection, you can enter here the registration code.
- **Device ID:** Exclusive identifier for your device. This identifier is essential to activate TwoNav as well as any map in the device.

#### 8.1.2 Language

Set the language of the application. Interface texts and indication voices will use the same language.

#### 8.1.3 Units

Set the type of measurement units to use in TwoNav.

### 8.1.4 Brightness

Regulate the amount of light of the screen and adjust it for each situation. If the percentage of brightness is high, application interface will be more highlighted.

**Note:** In night mode, the brightness will be automatically reduced to avoid dazzling.

### 8.1.5 Audio

- **Mute:** Enable/Disable the general audio level of TwoNav application.
- **General:** Manage the general audio level of TwoNav application.
- **Alarm:** Regulate the audio level for alarms and radar warnings.
- **Clicks:** Regulate the audio level for buttons pulses.
- **Voice:** Regulate the audio level for voices indicating manoeuvres.

### 8.1.6 Folders

In order to show your elements (maps/waypoints/routes/tracks) in data lists ('Main menu > Data'), they have to be inside the right folder of the device. If not, they will not be accessible from data lists.

- **Default folder for maps:** 'TwoNavData/Maps'
- **Default folder for your recorded tracks:** 'TwoNavData/Data/Tracklog'
- **Default folder for tracks/waypoints/routes:** 'TwoNavData/Data'

You can add more than one folder for each type of data. Then data list will also contain in a single list all data from the different folders that you have set.

Maps folder 1:

\Storage Card\TwoN... ▼

Data Folder 1:

\Storage Card\TwoN... ▼

Tracklog folder:

\Storage Card\TwoN... ▼

Maps folder 2:

▼ x

Data Folder 2:

▼ x



Track1.TRK



Pyrenees routes



Track2.TRK

**Note:** If there is any other folder inside the one you have selected, it will also be shown in the data list. For example, if 'Pyrenees routes' folder inside 'TwoNavData/Data', 'Pyrenees routes' will also be shown in the data list.

### 8.1.7 Time zone

Set the time that will appear by default in the application according to the Universal Time Coordinates (UTC). You may also set the summer time automatically.

**Note:** TwoNav keeps the time updated as long as the device receives a GPS signal. Usually, inside the buildings the signal from satellites is not received unless there is a repeater, so the time and night vision might be affected.

### 8.1.8 Coordinates

- **Type of coordinates:** UTM, Latitude/Longitude, BGN...
- **Degree format:** Configure the order in which the degrees are displayed.
- **Datum:** Used to translate the positions of elements (waypoints/tracks/routes) to the exact position on the earth. Datum systems is needed because the earth is an imperfect ellipsoid.

These settings will be used when introducing any coordinate into the application as well as creating any element (waypoints/routes/tracks).

## 8.2 Map

### 8.2.1 Automaps

- **Auto-open maps:** Opens the most suitable map for each situation.
- **Auto-open reliefs (\*.CDEM):** Opens the most suitable elevation map for each situation (enabled independently from 'Auto-open maps').

If these options are enabled, TwoNav will try to load the best map for each situation:

- **'On-Road' mode:** The road map (\*.VMAP) of the area will be loaded and the rest will be closed.
- **'Off-Road' mode:** The map with the best resolution (not an \*.VMAP) will be loaded and any other road map (\*.VMAP) will be closed.

**Note:** It is highly recommended to have this option always on, specially on those situations in which you need to make a change in navigation mode.

**Important:** If you want to keep the loaded maps when changing from one mode to another, deactivate this function.

## 8.2.2 Autozoom

If this option is enabled, TwoNav will calculate the most suitable zoom for the present speed (the higher the speed, the further it will go):

- **No:** Function disabled.
- **Automatic:** Automatic zoom window.
- **Show destination:** Zoom window including the current position and the destination.
- **Show next event:** Zoom window including the current position and the following route/waypoint/...
- **Show all current leg:** Zoom window including the current position and the present leg or full track.
- **Fixed scale:** Zoom window according to 'Fix scale' value.
- **Map scale:** Zoom window according to the map scale.

If during the navigation 'Force 2D' is enabled, 2D map view will be automatically set even other views are currently displayed.

## 8.2.3 Re-center


While navigating you may move the map to see other parts of the grounds, and so losing the reference of your current position. In these cases, 'Re-center' button is displayed on the screen.

- **Time to re-center:** TwoNav has an automatic re-centring function, so if map is not moved manually, it will be re-centred back to your current position according to the set value.
- **Smooth re-center:** Re-centring can be performed with a smooth movement or instantaneously.
- **Re-center when editing:** Automatic window re-centering while editing or creating new points for routes/tracks. If disabled, map window will not be automatically refreshed, so you will need to move the map window manually.

**Note:** If the function 'Autozoom' is activated, when pressing 'Re-centrer', the zoom suitable for your present speed will also return, losing the variation of the zoom level you may have done.

## 8.2.4 Orient map

- **Track up:** Orient map towards your course, map will rotate to be adapted to your present course. Perspective in front of you will be displayed on the screen.

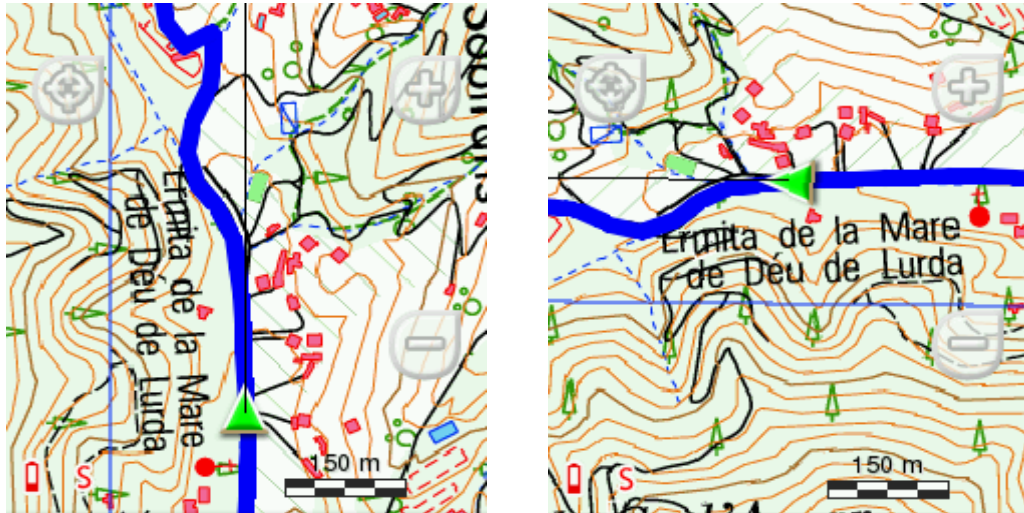

- **North up:** Map is not oriented, your position will be marked with the pointer in the centre of the screen and the pointer will rotate to show your present course. The map will not rotate and the north will always be upwards.

**Note:** You can modify this option from the tool bar.

## 8.2.5 CDEM reliefs


TwoNav may use elevation maps (grids with height information) to assign altitude data on maps/tracks/waypoints/routes and then be able to display them dimensionally.

- **Draw relief:** Enable/Disable this function.
- **2D shaded relief:** 2D maps can display relief shadows.





- **Relief colors:** Select between different hypsometric colors to display your maps: high contrast colors, low contrast colors, default palette of colors...

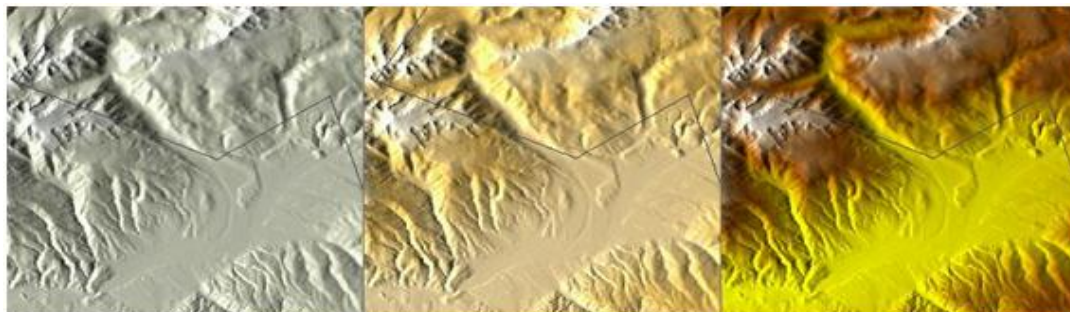

- **Draw landscape with shadow:** This visual option makes the relief drawing more attractive.
- **Flat colour steps:** Instead of using a fading colour, just one plain colour for each height interval will be used.
- **Draw level lines:** Altitude lines are drawn.

### 8.2.6 3D

TwoNav offers three visualizing modes so you have the most adequate perspective in each moment.

- **'2D' mode:** Zenith plan.
- **'3D' mode:** Tridimensional flat image with a perspective.
- **'3D+' mode:** Holography of the terrain in real 3D (vectorial maps will not be displayed in 3D+). This mode can only be displayed if you load:
  - 3D relief map (\*.CDEM)
  - Raster map (normally \*.RMAP or \*.ECW)

**Important:** Press '2D > 3D > 3D+' button at the tool bar to switch between viewing modes.



2D

&gt;&gt;&gt;&gt;

3D flat

&gt;&gt;&gt;&gt;

3D+

&gt;&gt;&gt;&gt;

3D+ only relief

- **'3D' mode:** Choose the sequence for '2D > 3D > 3D+' button:
  - **'2D > 3D+' (if raster map):** 2 positions (2D > 3D flat/3D+). TwoNav will try to show 3D+. If not possible, 3D flat will be shown.
  - **'2D > 3D > 3D+':** 3 positions (2D > 3D flat > 3D+)
- **Altitude exaggeration:** Multiplies the altitude of the relief to make a clearer effect in 3D+.
- **Shading:** Relief will be displayed in a clearer and attractive way, as it features shadow simulations enhancing thus the variations of the ground. This option is only effective on the 3D+.
- **Field of vision:** Determines the angle from which the map will be seen. When introducing angles over 60°, it will simulate a camera with wide lenses.
- **Foggy horizon:** The furthest part to the perspective becomes faded, creating a misty effect between the sky and the map that helps to distinguish them more clearly.
- **3D quality:** Customize the depth of the 3D quality from a list of different degrees.
- **Maximum tiles to show:** Set the maximum number of map tiles to display (the higher number of tiles displayed, the slower they will load).
- **Sea level:** Fix the current value of the sea level to represent situations where the height is under the sea level.

## 8.3 Display

### 8.3.1 Tracks

- **Draw arrows over the track:** To easily know its direction.



- **Track variable color:** Track can be represented using variable colors representing all along the itinerary the variability of a specific track data

field (altitude, speed, slope, time, heart rate frequency...). Degradation colors are related to different levels of the same field.

- **Navigating track:**

- **Highlight navigating track:** When navigating a track (active track) you might see it highlighted from the rest of the tracks.
- **Navigating track color:** The active track has a different color line from the rest of the tracks.
- **Double line:** The active track has a specific double line to easily highlighted from the rest of the tracks.


### 8.3.2 Hint

This function can be fully customized according to your will: add/exclude the data fields that later on will be displayed on the map window: map information, coordinates of this position, bearing to this position, distance to this position, altitude of this position...



### 8.3.3 Rotate screen

Get a landscape view of your device. Rotate the screen in the various angles to adapt it to your preferences.

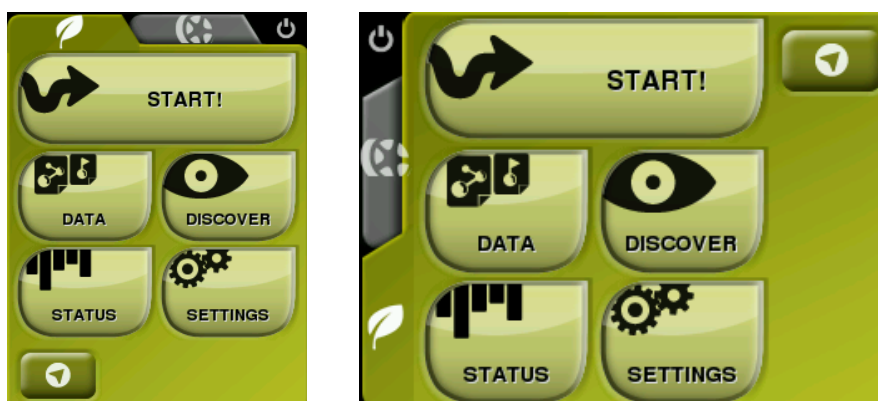

### 8.3.4 Nightview

In low light conditions, the colors and brightness of TwoNav may dazzle. This function reduces the brightness of the screen and displays an interface with darker tones.

- **At night and tunnels:** TwoNav changes automatically to night mode at night and inside tunnels.
- **At night:** Only at night (not for tunnels).
- **Not automatic:** You will be able to set manually when you wish to have the night mode on.

**Note:** TwoNav keeps the time updated as long as the device receives a GPS signal. Usually, inside the buildings the signal from satellites is not received unless there is a repeater, so the time and night vision might be affected.

### 8.3.5 Pointer



- **Pointer/Animation pointer:** Icon that displays your current position on the map.
- **Fixed ring and parallels:** A circumference encircling your position will be drawn and two lines will indicate the course.
- **Fixed ring radius:** It determines the size of the circumference surrounding your position.
- **Draw prow lines parallels:** Enable/Disable parallel lines of one of the previous option.
- **Variable ring:** Add more rings around your position. Define the radius of the inner ring and the number of successive rings which will be equidistant from the first inner ring.
- **View turning radius:** When turning, the radius corresponding to the circumference described will be displayed.
- **Prow lines (only in 'On-Road' mode):** Set the length of the prow line:
  - Disabled
  - Pixels
  - Real distance

- Expected distance in time (TwoNav will calculate the estimated distance to be covered in that time at current speed)
- Infinite
- **Extra elements:** Extra elements can also be displayed according to customized parameters.

*Note: These properties depend on the selected vehicle.*

### 8.3.6 Themes

Select among different colors the skin of TwoNav's interface.

### 8.3.7 Labels

- **Font size labels:** Font size for all waypoints.
- **Label color for new waypoints:** Default label color for new waypoints (waypoints already created will keep their original color).
- **Background color for new waypoints:** Background color for waypoints.
- **Background transparent for new waypoints:** Background can be transparent.
- **Waypoint icon position:**



wpt002

**Elevated**



wpt002

**Centered**



wpt002

**Centered without background**

- **Radius color:** Default radius color for waypoints that display their radius.
- **Radius thickness:** Default radius thickness for waypoints that display their radius.

### 8.3.8 POI (Points Of Interest)

- **Active POIs:** Add/Exclude the POI categories that are displayed on map window. These POIs are provided by map cartographies.
- **Active personal POIs:** Add/Exclude your personal POI that are displayed on map window. These POIs are created by you.

**Note:** When selecting destination or pressing 'Zoom to it', all POIs information will be displayed in preview window, although not being shown on the map window.

### 8.3.9 Geocaching

Geocaches which have been labelled as 'Found geocache', will not appear in the list. By doing this, there will be no need to see geocaches that were previously found.

## 8.4 Fields & Buttons

### 8.4.1 Data fields

Data bar and data pages can be configured to fit your specific preferences, customize TwoNav according to your needs by displaying the data fields that you really need.

The screenshot shows the 'Data page' configuration interface. On the left, a list of data fields with checkboxes and up/down arrows:

- Time
- Chronometer
- Mean Speed
- Partial energy
- Mean pace
- Altitude
- Trip odometer
- Accumulated climb

On the right, a grid of data fields displayed on a data page:

TIME 15:52	CHRONOMETER 00:33:03
MEAN SPEED 52 KM/H	PARTIAL ENER.. 100 KCAL
MEAN PACE 0 MIN/KM	ALTITUDE 51 M
TRIP ODOM. 1.100 KM	ACCUM. CLIMB 22 M


- **Add data fields:** By activating the ticked square.
- **Remove data fields:** By deactivating the ticked square.
- **Order the data fields:** By using 'Up'/'Down' buttons.
- **Add/Remove pages to the default ones:** By using '+' and '-' buttons.

**Note:** You can also change just one field by opening the contextual menu on it (select 'Change this field').

**Important:** Get to know more about data fields in Appendix.

### 8.4.2 Tool bar

Tool bar can be configured to fit your specific preferences, customize TwoNav according to your needs by displaying the tools that you really need.


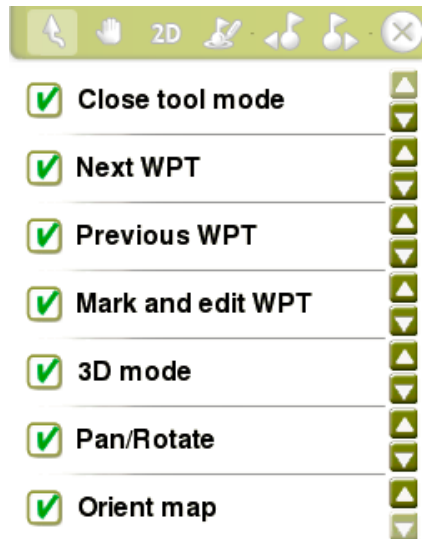


- **Add tools:** By activating the ticked square.
- **Remove tools:** By deactivating the ticked square.
- **Order the tools:** By using 'Up'/'Down' buttons.

*Important:* Get to know more about tool bar functions in Appendix.

### 8.4.3 Map page

Show/Hide the functions accessible from the map window.

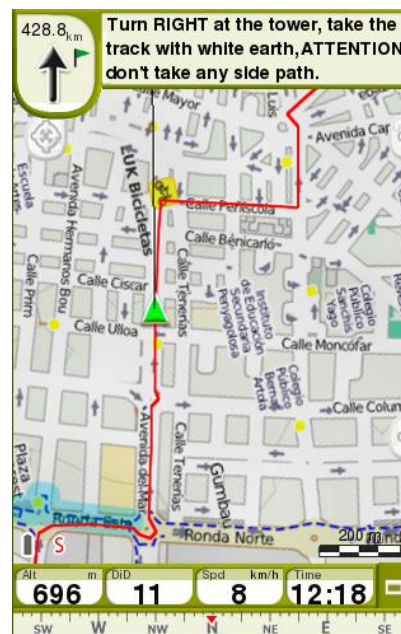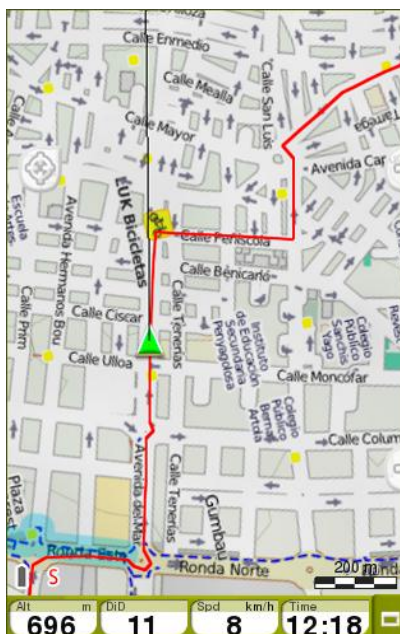

## 8.4.4 Keys

Each device button has a double command: short press and long press. Both of them can be personalized for different usages.

## 8.5 Alarms

During your navigation, TwoNav may alert you when getting close to certain points of special interest. You can also set your own alarm warnings when exceeding limits.

### 8.5.1 Data fields

Alarms for data fields can be fixed according to your preferences, all you have to do is set a maximum or/and a minimum value for each field. In case you do not fix any value, the alarm will be deactivated with no effects during the navigation.



Alarm warnings will be automatically displayed during the navigation in a pop up window according to the preferences that you previously set on data fields.

- **Alarm warning in red:** If you are exceeding the maximum value.
- **Alarm warning in blue:** If you do not reach the minimum value.

Fix also a repetition interval for each alarm. In order to make the pop up window disappear, do is a simple click on any part of the screen outside the warning window.



Configure additional settings of the pop up window from 'Main menu > Settings > Advanced'.

### 8.5.2 Tracks

When you are getting away from the original track you can set an alarm to warn you: activate 'Deviation from route' and set a maximum or/and minimum deviation distance. Fix also a warning sound and a repetition interval.

### 8.5.3 Waypoints

When you are getting close to any waypoint you can set an alarm to warn you:

- **Default radius for waypoints:** Waypoint alarm will be displayed when you are entering into the radius of any waypoint. Set that radius according to your preferences.
- **Audible alarm at waypoints:** Fix also a warning sound.
- **Start screen at waypoints:** The screen of your device will be turned on when entering into the radius of any waypoint.
- **Auto-play associated images/sounds/text/videos:** Associated files can be automatically displayed when you are entering into the radius of any waypoint.

**Important:** You may also be alerted by the Points Of Interest (POIs) that you store at 'TwoNavData/POI'. If you want to be alerted when reaching one of these POIs, each one of them will have to be associated to a image/sound/text/video file.

### 8.5.4 Speedcams

TwoNav will consider the introduced files at 'TwoNavData/Radars' folder as speedcams. So when you are getting close to any traffic speedcam you can set an alarm to warn you (an updated file with current speedcams is required).

**Important:** Update of radar files can be easily done from Land/Air software (Windows/Mac platforms), more information at <http://www.CompeGPS.com>

- **Speedcam camera alarm:** Enable/Disable this function.
- **Speed camera alarm distance:** Set the minimum distance to warn you.
- **Show speedcams on the map:** Show/Hide speedcams on map window.

- **Speed to alarm about radars:** Set speed limitation to warn you about near radars.

### 8.5.5 Speed limit

- **Set speed limit:** Speed limit of each particular road will be considered by default, but you can set a fix speed limit to warn you disregards the limit of each road.
- **Speed alarm:** When driving over the established speed limit a warning display will be shown. Choose among different alarm displays.
- **Speed to block interface:** User interface will be blocked when exceeding this value. You will not be able to manipulate the application. Configure this function according to laws of each country.

### 8.5.6 Depth

Before you enable/disable depth alarm, you must set the default value for maximum draft (*'Draft': only for 'Boat', depth to which a vessel is immersed*):

- **Current**
- **Next waypoint**
- **Prow line**

Fix also a warning sound and a repetition interval.

## 8.6 Training

Fix the training tools of TwoNav to your own needs:

- **Virtual Coach:** TwoNav can use a previous track as a reference to compare your current performance. A simulation of that track will be played at its original speed, so you can compete against it (*'Virtual Coach'*). Two pointers will be displayed: your current position and an additional pointer, the *'Virtual Coach'*.
- **Legs type:** Detailed analysis of the track by *'virtually'* dividing it in different legs (portions of the track) either by distance, time or aerial conditions. Analyse the legs of the track from its properties, click on a leg to get more information about it.



- **Energy calculation method:** According to your preferences.
- **Gender/Weight/Age:** Information used to calculate other data.

## 8.7 Vehicle

Before you start navigating, it is very important to set your vehicle so the system configuration and calculations will be adapted according to the selected vehicle:

- **Pedestrian**
- **Bike**
- **Car**
- **Boat**

By setting your vehicle, some parameters as well as aspects of the navigation may vary depending on the selected vehicle: autorouting restrictions, street directions, cruise speed, expected average speed, minimum moving speed, content of function 'Hint'...

The colour of the icon indicating your current position will change according to the selected vehicle. Change pointer settings from 'Main menu > Settings > Display > Pointer'.

**Important:** Since marine navigation has special needs comparing to terrestrial navigation, when 'Boat' vehicle is selected some special changes (in addition to normal changes related to vehicle) will take place: different interface theme, marine units, specific menu to select the final destination, specific data fields in data bar and data pages, specific tool bar, function 'Man Over board' available from the tool bar, marine charts are loaded if present (only if 'Automaps' function is enabled)... 'On-Road' navigation has no sense in 'Boat', so 'Off-Road' mode will be automatically enabled when 'Boat' is selected.

## 8.8 Navigation

- **Resume navigation at start:** TwoNav proposes you the same destination which was set last time application was closed.
- **Start Triplog at power on:** TwoNav will automatically record by default all your movements when you start using the application. This function is very useful for users who forget to record the itinerary.

## 8.8.1 Autoroute

The 'On-Road' navigation can be adjusted to automatically calculate your route, so TwoNav will generate a planned itinerary according to your preferences.

### 8.8.1.1 Restrictions

Before you start navigating, it is very important to choose if the planned route that you are about to navigate will be performed only on certain types of roads.

### 8.8.1.2 Recalculate

Before you start navigating your planned route, you must consider that during the navigation you might get away from the planned route due to multiple facts. In this case, TwoNav allows you to set values to recalculate your original route and get on track again.

### 8.8.1.3 Calculation method

Before you start navigating, it is very important to choose if the planned route that you are about to navigate will be automatically calculated by:

- **The shortest way**
- **The fastest way**

## 8.8.2 Next waypoint

When navigating a route, you can select a required event to validate a waypoint and switch to the following one:

- **Radius of the next waypoint:** Enter inside the radius of the next waypoint (only that one).
- **Radius of any next waypoint:** Enter inside the radius of any of the next waypoints (next one and any of the succeeding waypoints).
- **Roadbook mode:** When entering the radius of any waypoint, it will be set as next. When going out of it, next one will be activated. When following a roadbook it is required to show the information of the current waypoint while in its surroundings. This way, instructions for each point can be followed correctly.
- **Bisector inside next waypoint:** Enter inside the radius of next waypoint and cross the bisector that is formed with the previous and next waypoint.

- **Bisector inside next waypoint or 10% of any waypoint:** Same as the previous, but if any waypoint is quite near (10% of its radius) it will be validated and the next one will be activated.
- **Only buttons bar:** Never change to next waypoint automatically, only manually when 'Next waypoint' or 'Previous waypoint' buttons are pressed.

A default radius can be assigned for route waypoints, this value will be taken when this information is not available. If radius for a concrete waypoint of the route is defined, it will be respected. But in case that waypoint does not have a specific radius, the default one will be used instead.

### 8.8.3 Estimated times

Configure the preferences to automatically calculate the estimated time of destination arrival:

- **Use V-Map's routing speed (only in 'On-Road' mode):** Calculates the estimated time of arrival taking into consideration the speed of the route.
- **Use navigated track time (only in 'Off-Road' mode):** Calculates the estimated time of arrival taking into consideration the time of the track.
- **Interval for partial mean speed:** Calculates the estimated time of arrival taking into consideration the partial mean speed of the selected interval of time.
- **Cruise speed:** Expected mean speed according to the selected vehicle. Default 'Cruise speed' value for each vehicle:

- **Pedestrian:** 3 km/h
- **Car:** 80 km/h
- **Bike:** 15 km/h
- **Boat:** 20 km/h

**Note:** If no 'Routing speed' or 'Track time' are available, 'Mean Speed' will be used to calculate the estimated time of arrival.

### 8.8.4 Slope

In order to get slope data, TwoNav requires you to set the distance values to calculate the following data:

- **Slope calculation distance:** Used to calculate current 'Slope' data field.
- **Next slope distance:** Used to calculate 'Next slope' data field.

## 8.9 Tracklog

Set the type of track recording that will be generated for your navigation according to your preferences.

- **Recording interval:**
  - **By time:** Set the time to create every new track point.
  - **By distance:** Set the distance to create every new track point.
  - **Automatic:** Track points will be automatically recorded when changing course and depending on the speed.
- **Recovery time:** When TwoNav is suddenly switch off, if you turn the device on during the established interval, the previous data is recovered and displayed again.
- **File format:** Set the track format of the resulting file.
- **Weak signal filter:** If GPS signal is not reliable, points are ignored while recording track. This prevents the recording of non reliable data.
- **Track color:** Set the colour for the generated track.
- **Thickness:** Set the thickness for the generated track.
- **Points shown without reduction:** Recorded track is visible on map window, but only the latest points of the track are shown as they are recorded (with no reduction of points). Set how long this section is.
- **Reduction for previous points:** It is highly recommended to make a reduction of the rest of the displayed track as well. Set a reduction to display the previous points of the recorded track (all except the latest points).

***Important:** These reductions does not affect the resulting track file (it will keep all points). These functions only concern the track being displayed on screen in order to save memory.*

## 8.10 Autonomy

Maximize the autonomy of your device while running TwoNav:

- **Battery level**
- **Shutdown screen:** Time interval to automatically switch the screen off.

- **Do not shutdown if plugged:** If enabled, screen shutdown time is not applied, leaving the device with the screen on during all the trip.
- **Connection interval:** Improve the autonomy of the device by setting the connection interval of the GPS.
- **Disconnect GPS when stop:** TwoNav will detect a stop in your itinerary and will automatically disconnect the device.
- **Protection against unplug:** In order to prevent the device from discharging, in case it is disconnected accidentally from the power source, TwoNav will detect the unplugging. If no interaction is done, TwoNav will shut down after 30 minutes.

## 8.11 Communications

### 8.11.1 Bluetooth

Enable this function to scan and detect bluetooth receptors as well as derive audio connection between your device and bluetooth headsets.

### 8.11.2 GPS

Settings to easily connect your GPS application:

- **Auto-Search GPS:** Detect your GPS device automatically.
- **Connect GPS at start:** GPS connection can be established by default when device is started.
- **Communications port:** Set the port of the GPS-Computer connection.
- **Protocol:** Set the protocol used by GPS.

***Note:** If you do not know the protocol, set 'Auto-Detect'. TwoNav will identify the original protocol of the GPS (excepting: Top Navigator and Brauniger Comp/IQ).*

- **Speed:** Set the data transfer speed.

## 8.12 Calibration

### 8.12.1 Touchscreen

If you notice inaccuracies while using the device, you should calibrate the screen, this action prevents little maladjustments. Follow these steps:

1. Click the centre of the displayed cross.
2. Repeat this action in the moving across.
3. Once the screen is calibrated, a confirmation message will pop up. Press any part of the screen to end the calibration process.

### 8.12.2 Altitude (Barometer)

TwoNav offers you different ways to determine the altitude value you are taking during your navigations:

- **GPS:** Altitude data from the GPS will be used.
- **CDEM (Altitude map):** Current altitude of the 3D relief map (3D relief map must be loaded).

### 8.12.3 Bearing (Compass)

Bearing data determines the orientation of the map when the function 'Orient map: Track up' is enabled. TwoNav offers you different ways to determine the bearing you are taking during your navigations:

- **GPS:** The latest positions received are used to calculate the bearing of your current movements. As soon as you stop, this reference will not be reliable, as there will be no reliable movements to calculate the bearing.
- **Compass:** Data recorded from the compass will be used in order to determine the orientation of the device.
- **Automatic (recommended):**
  - **Driving slowly:** Data recorded from the compass will be used.
  - **Driving fast:** Data recorded from the GPS position will be used.

## 8.13 Advanced

'Advanced' enables extra functions that are not frequently used and could add unnecessary complexity to the application system:

- **Keyboard:** Set the layout of the application keyboard.
- **Information in waypoints/tracks list:** Display more information for listed elements. Extra information will be presented in a 2nd line right after the name of the item. Select the data fields that you want to display.
- **Active waypoints mode:** Set working mode for Active Waypoints Files.




- **Basic:** Fixed Active Waypoint File + autoload it at start.
- **Advanced:** First waypoint opened will be the active and it will not be autoloaded at start.
- **Click on Nextevent:** Set the default destination when pressing 'Nextevent' function.
- **Reload data when restarting:** TwoNav loads you the same data which was already opened last time application was closed.
- **Pop up for alarms:** Fix the duration of the pop up window alarm.
- **Draw map corners:** TwoNav draws on the map window the frames for all the maps loaded in the application.
- **Lines in Infonext:** Enter how many lines will be displayed in 'Infonext' function.

Turn RIGHT at the tower, take the main.

Turn RIGHT at the tower, take the main track with white earth, ATTENTION !! don't take any side path.

- **Zoom with double click**
- **Permanent zoom click**
- **Show route overview:** When you are about to navigate a track/route/roadbook, you can display an overview look of the itinerary.

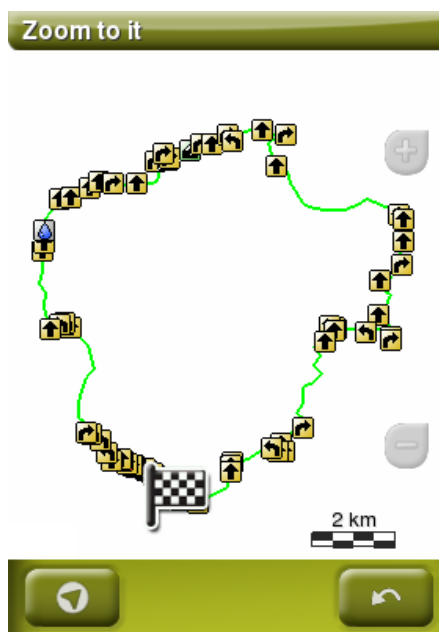

- **Lane info (only in 'On-Road' mode):** In roads with several lanes, TwoNav will inform you about which is the correct lane to take.
- **Antialias:** Draw smoother lines in vectorial maps (\*.VMAP).
- **Smoother:** TwoNav calculates an interpolation of movement between the positions that the GPS adopts with the aim of showing a gentler movement to allow you a better perception of the speed at which we are driving in relation with the surroundings. By enabling this option, you will be able to calculate the distance and the exact moment to carry out a manoeuvre.

This function also makes a prediction of GPS position, correcting delay on the signal caused by the system showing current position almost in real time.

- **Seabed areas:** If enabled, only depth contours are displayed.
- **Profiles 'On-Road'/'Off-Road' mode:** Since 'On-Road' and 'Off-Road' modes have different needs from each other, TwoNav displays different options for each mode. If disabled, all options (menus and data fields) will be the same for 'On-Road' and 'Off-Road' modes.
- **List menu:** Choose between several modes to display submenus:
  - **List Menu:** Options are displayed on a continuous list.



- **Button menu:** If there are more options than the screen can display, more pages will be shown.
- **Static navigation:** The chip of the GPS has a minimum speed value to consider movement. Speeds under this value will not be considered movement. This value is set by default, it cannot be modified by you.

- **Minimum accumulated altitude:** Fixes the minimum altitude to be considered increase of altitude. Altitudes under this value will not be considered increase.
- **Minimum moving speed:** Set the minimum speed value to consider movement. Speeds under this value will not be considered movement This value is set by you.
- **Screenshot creates waypoint:** A waypoint with an associated image is created each time a screenshot is made. Picture is saved at *'TwoNavData/Data'*.
- **Save discard tracklog in trash:** If enabled, when options *'Pause'* or *'Finish trip'* are pressed, your following movements will be automatically recorded as backup track copy inside *'TwoNavData/Data/Tracklog/Trash'* folder. This is a security system in order to avoid losing tracks in case you forget to start *'Triplog'* function.
- **Show current tracklog in list:** If enabled, the track that is being recorded will be listed in track list marked with *'\*'* (*'Main menu > Data > Tracks'*).
- **GOTO arrow tangent at:** GOTO arrow displays direction of the following section of the track. Enter here the distance to calculate tangent to provide the direction.
- **Exit waypoint after:** If a track/route contains waypoints, navigation will switch to next waypoint when leaving the current one. Enter here the parameter which determines how far from the waypoint you have to go to exit it.


## 9 MANAGEMENT FROM A COMPUTER



Land/Air is the perfect software to prepare and analyse all your outdoor activities (Windows/Mac platforms). With Land/Air you will be able to analyse your trips and manage all data recorded by TwoNav comfortably from home.

You can get the latest version of Land/Air from [www.CompeGPS.com](http://www.CompeGPS.com) (learn more about Land/Air by downloading the full manual).

After installing it, all you have to do is connect your TwoNav device to the computer (Windows/Mac). Then Land/Air software will automatically detect the device and display it at 'Storage files' branch in the data tree.

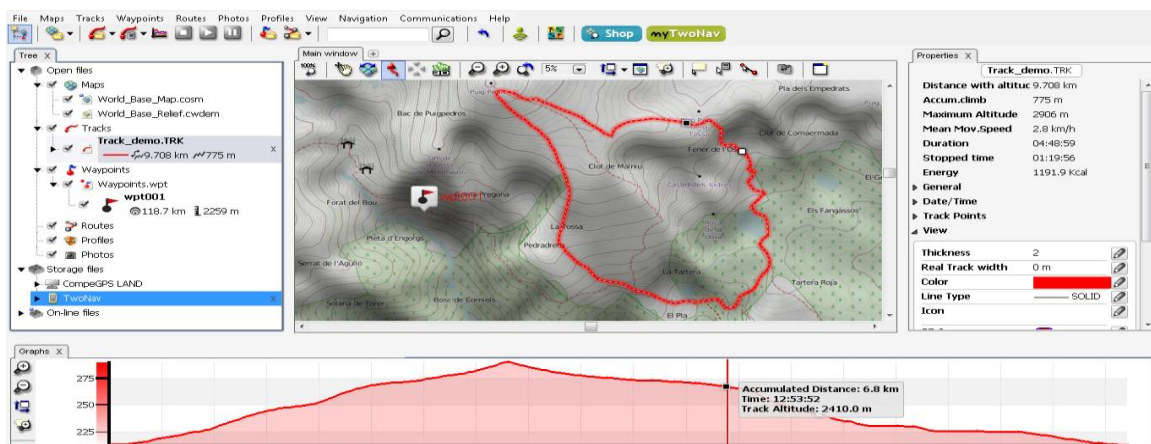

Under the name of the device you can view its content classified by type of item (tracks/routes/waypoints/maps).

Once connected, you can perform various operations with the device:

- **Open and analyse the data recorded by TwoNav**
- **Activate and transfer files between 'Computer-TwoNav'**
- **Update your device to the latest TwoNav version**

### 9.1 Open and analyse the data recorded by TwoNav

While using Land/Air, open a file from a TwoNav device is as easy as do a double click on its name at the tree data.

Once opened, the file will appear in the branch 'Open files' at the data tree. Then, you will be able to start working with it: place it on the map window, analyse its properties, compare its data using graph representations...

**Note:** Remember that opened file are still stored in the memory of the device. If you want to save them on your computer, select 'Save'.

## 9.2 Activate and transfer files between 'Computer-TwoNav'


**Important:** If a file is protected it will require a license, so when transferring the file, it will ask for register code to activate the license. If activation is not done, you will not be able to use it in your TwoNav device.

**Note:** You can transfer more than one file at a time: hold down 'Control' key while selecting the files.

### 9.2.1 Via contextual menu

Open the contextual menu on any element, either in the data tree or on the map window and select 'Send to' and choose the final destination of the file.

### 9.2.2 Dragging files directly from the data tree

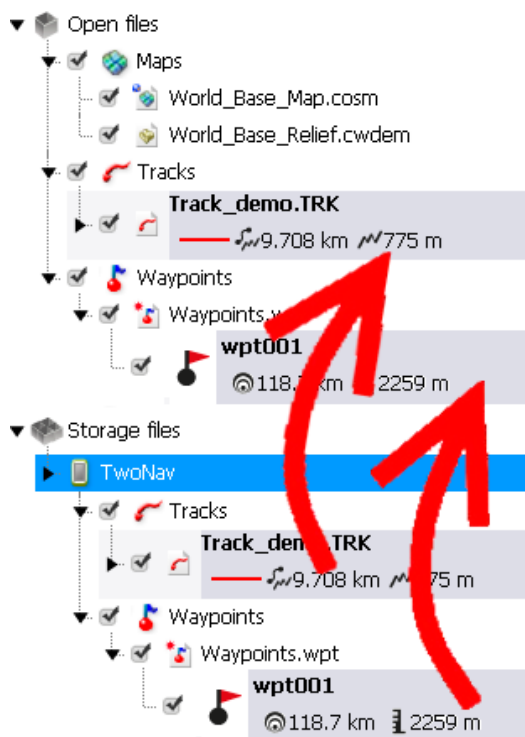

You can move files from the data tree by moving the files from its origin to its final destination.

For example, if you want to move any element from the internal memory of your TwoNav device to your computer, drag the file from TwoNav device's folder to the branch 'Open files'.


Then, the element will be automatically placed in the default folder for that kind of files.

You can also do the opposite process: drag open files (listed at 'Open files' branch of data tree) to TwoNav devices listed at 'Storage files' branch.

## 9.3 Update your device to the latest TwoNav version

Land/Air software can automatically update the TwoNav software of your device.

1. Connect the TwoNav device to the computer.
2. Once your TwoNav device appears listed at the data tree ('Storage files'), open its contextual menu and select 'Update TwoNav software'.

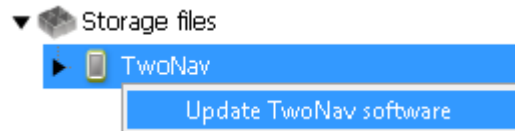

3. Download and installation process will take several minutes.
4. When finished, you can boot the device normally.

## 10 WARRANTY

CompeGPS guarantees that this product is free from defects in material or workmanship for two years from the date of purchase. During warranty period, CompeGPS commits to repair any defective product or replace it for a functional one, without guarantee about preservation of any data that may be stored in it.

CompeGPS does not guarantee the quality of the included maps, being free of any responsibility that may be derived from them.

Wear and tear effects that may happen in some elements (like screen, buttons, rubber caps or moving parts) are out of guarantee.

Present warranty will be cancelled if any of the next circumstances happen:

1. Rough handling in any form: strong hits, pricks, torsions, compressions, vibrations... Recharging battery while driving a motorbike or any other vehicle which is causing vibrations is highlighted as a specific case of rough handling.
2. Inappropriate exposure to water (for example: any type of exposition if rubber caps are incorrectly adjusted or immersions even with caps correctly placed), dust, extreme thermal conditions, corrosion, oxidation or chemical substances.
3. Manipulation of the product by non-allowed devices or applications, particularly if trying to install any other software than the authorized (supplied exclusively in CompeGPS website: [www.CompeGPS.com](http://www.CompeGPS.com)) or using illegal activation keys not provided by CompeGPS.
4. Disassembling, modifying or repairing when not performed by CompeGPS technical service.

CompeGPS will not be liable for any damage derived from the use or bad use of the product, being free of any obligation if any accident occurs when the device is used in any mean of transport.

Any demand must be contacted with CompeGPS by one of these ways:

- Through the reseller that made the sale of the product.
- On-line technical support department of CompeGPS (<http://Support.CompeGPS.com>)

Once the contact has been confirmed, next steps to execute your guaranty will be communicated to the client.

Any demand must come with its correspondent original receipt, where vendor name and address, date and place of purchase and type of product must be specified.

Any shipping costs are the sole responsibility of the customer.

## 11 APPENDIX: DATA FIELDS

Check full list of data fields and their usage. These fields are displayed in the data pages and the data bar, but you can configure which fields to show according to your needs from '*Main menu > Settings > Fields & Buttons > Data fields*':

- **Accumulated climb:** Total amount climbed from the beginning of itinerary up to the current position.
- **Accumulated descent:** Total amount descended from the beginning of itinerary up to the current position.
- **Air pressure:** Current air pressure.
- **Altitude at next:** Predicted altitude to next waypoint if current trajectory is maintained.
- **Altitude ground level:** Altitude from the ground level.
- **Altitude:** Altitude from the sea level.
- **Ascent to destination:** Difference between the altitude of destination and current altitude.

- **Ascent to next:** Difference between the altitude of current waypoint and the next waypoint.
- **Atmospheric pressure:** Present atmospheric pressure provided by the barometric altimeter.
- **Barometric altitude:** Altitude provided by the barometric altimeter.
- **Battery:** Remaining energy in your device.
- **Bearing to next:** Course towards to the next waypoint.
- **Bearing:** Current course.
- **Chronometer:** Starts counting when started.
- **City:** Current city.
- **Compass:** Compass representation.
- **Coordinates:** Coordinates of the current position
- **Croquis:** Image displaying manoeuvres.
- **Current depth:** Current depth value taking as reference the nautical chart.
- **Current pace:** Speed in minute/kilometer.
- **Current power:** Current power at this moment.
- **Depth at next:** Depth value at next waypoint
- **Depth at prow line:** Current depth value at prow line.
- **Deviation from route:** Distance to active route.
- **Differential GPS:** GPS gives differential signal (submetric accuracy).
- **Distance to destination:** Distance to destination (last waypoint of the route).
- **Distance to next radar:** Distance to next radar point.
- **Distance to next:** Distance to the next waypoint.
- **Distance to virtual coach:** Distance between your current position and the position of the 'Virtual Coach'.



- **Estimated hour at destination:** Estimated time of arrival to destination (last waypoint of the route) at present speed.
- **Estimated hour at next:** Estimated time of arrival to the next waypoint (at present speed).
- **Estimated time to destination (cruise):** Estimated time to reach destination (last waypoint of the route) at cruise speed.
- **Estimated time to destination:** Estimated time to reach destination (last waypoint of the route) at current speed.
- **Estimated time to next (cruise):** Estimated time to reach next waypoint at cruise speed.
- **Estimated timeto next:** Estimated time to reach next waypoint at current speed.
- **Free memory:** Remaining memory in your device.
- **GOTO arrow:** Arrow that indicates the course towards to the next waypoint.
- **GPS altitude:** Present altitude provided by GPS receives via satellites.
- **GPS bearing:** Direction followed according to the GPS system.
- **Graph:** Representation of the track being covered.
- **HDOP:** Horizontal Dilution Of Precision (estimated current accuracy of the GPS).
- **%HRR:** Heart Rate Reserve.
- **Heart rate zone (% Max.):** Predefined heart rate intensity zones.
- **Heart rate zone (% Max-Rest):** Predefined heart rate intensity zones (Cardiac frequency in reserve).
- **L/D (instant glide ratio):** Glide ratio dividing horizontal distance by vertical (descending).
- **L/D goal:** Minimum glide ratio required to reach your goal (going through all intermediate waypoints).

- **L/D req.:** Minimum glide ratio required to reach next waypoint (distance to waypoint divided by waypoint's altitude over ground level).
- **Land altitude:** Altitude of the land provided by the 3D relief map (\*.CDEM).
- **Magnetic bearing:** Course followed according to the inner device compass.
- **Maximum altitude:** Reached during your itinerary.
- **Maximum power:** Maximum power achieved from the beginning of itinerary.
- **Maximum speed:** Maximum speed in current flight.
- **Mean moving pace:** Average of all pace values above the minimum speed movement.
- **Mean moving speed:** Average of all speeds values above the minimum speed movement.
- **Mean pace:** Average of all pace values.
- **Mean power:** Average of all power values.
- **Mean speed:** Average of all speeds values.
- **Moving pace:** Average of all pace values avoiding stopped points.
- **Next radar speed:** Displays maximum speed allowed by the next radar.
- **Next slope:** Slope till the distance set at '*Next slope distance*'.
- **Next waypoint name:** Name of the following waypoint.
- **Normal acceleration:** Perpendicular to movement in circular movements.
- **Number of points:** Track points saved up to current position.
- **Partial CO2 emission:** CO2 emission from the beginning of itinerary. Value reseted every time TwoNav is turned off.
- **Partial energy:** Partial odometer energy.
- **Partial mean speed:** Average of all speeds values from the beginning of itinerary up to this moment.

- **PDOP:** Position Dilution Of Precision (estimated current position accuracy of the GPS).
- **Place name:** Name of the element of your current position.
- **Precision:** Error margin of the GPS.
- **Radar icon:** Displays an icon when entering the radius of a radar.
- **Radius turn:** Radius of the turn that you are taking at the moment.
- **Route graph:** Representation of the route being covered.
- **Route percentage:** Percentage of the route that has been already done.
- **Signpost:** If available, road indications are displayed.
- **Slope to destination:** Remaining slope till destination is reached.
- **Slope to next kilometer:** Remaining slope from your current position to 1 kilometer.
- **Slope to next waypoint:** Slope from your current position to next waypoint.
- **Slope:** Slope of your current movement.
- **Speed limit:** Speed limit established for the current road.
- **Speed:** Current speed.
- **Stopped time:** Total amount of time without moving.
- **Sunrise:** Sunrise time.
- **Sunset:** Sunset time.
- **Tangential acceleration:** Component of linear acceleration tangent to the path.
- **Temperature:** Current temperature.
- **Time in movement:** Total amount of time moving.
- **Time to virtual coach:** Time difference between you and the 'Virtual Coach'.

- **Time without paquet:** Elapsed time since last time GPS signal was received.
- **Time:** Current time according to the selected time zone.
- **Total CO2 emission:** CO2 emission of all your trips. Value not automatically reseted every time TwoNav is turned off.
- **Total energy:** Total odometer energy.
- **Total odometer:** Accumulated distance of all your trips. Value not automatically reseted every time TwoNav is turned off. (TwoNav can calculate the total distance using different data calculations).
- **Track file name:** Name of the current track.
- **Trip odometer:** Distance covered from the beginning of itinerary. Value reseted every time TwoNav is turned off.
- **Used satellites:** Satellites fixed in current position.
- **VDOP:** Vertical Dilution Of Precision (estimated current vertical accuracy of the GPS).
- **Velocity made good:** Right direction's velocity component to the following waypoint.
- **Vertical speed:** Descending speed (vertical component of speed value).
- **Virtual free memory:** Virtual free memory in your device.

**Note:** *Due to platform restrictions, some functions may only be available in certain TwoNav platforms.*

## 12 APPENDIX: TOOL BAR BUTTONS

Check full list of tool bar buttons and their usage. These buttons are displayed in tool bar, but you can configure which buttons to show according to your needs from *'Main menu > Settings > Fields & Buttons > Tool bar'*:

- **3D mode:** Switch between viewing modes ('2D > 3D > 3D+').
- **Activate GPS:** Start/Stop GPS connection.

- **Alternate maps:** TwoNav superimposes maps, so that you can display two or more maps at the same time at map window.
- **Change leg:** Creates a new leg of the same track starting in the current position.
- **Close edition:** While editing any element, if pressed, the edition will be finished.
- **Close tool mode:** Button to easily close the tool bar mode
- **FF to next:** Jump to next event of the itinerary.
- **FF:** Accelerate the itinerary. Press it again to apply normal speed.
- **Full screen:** Most of user interface elements will be hidden to get a wider view of the map.
- **Less detailed map:** TwoNav will try to load a map of lower resolution than the currently loaded.
- **Man over board:** If some falls into the water, route will be automatically calculated to that point.
- **Mark and edit waypoint:** Create new waypoint in current position and access to its properties, so that you can customize them.
- **Mark roadbook point:** Create new roadbook waypoint in current position with default name and icon.
- **Mark waypoint:** Create new waypoint in current position with default name and icon.
- **More detailed map:** TwoNav will try to load a map of higher resolution than the currently loaded.
- **Mute:** Sound level is totally reduced.
- **Navigate:** Choose the destination that you are about to navigate.
- **New waypoint:** Choose where to create new waypoint and access to its properties, so that you can customize them.
- **Next waypoint:** When navigating, switch to the next waypoint (only visible when navigating a route/track which contains waypoints).
- **Open:** Open any file.

- **Orient map:** Track up/North up
- **Page:** Access to data pages.
- **Panning/Rotate:** Map movement mode.
- **Pause:** Pause the itinerary. Press it again to resume the simulation.
- **Previous waypoint:** When navigating, switch to the previous waypoint (only visible when navigating a route/track which contains waypoints).
- **RW to prev.:** Jump to previous event of the itinerary.
- **RW:** Accelerate the itinerary. Press it again to apply normal speed.
- **Screenshot:** A screen picture is automatically taken.
- **Shutdown screen:** When pressed, screen is directly turned off.
- **Start/Stop:** Pause or stop your current navigation.
- **Stop:** Stop the itinerary.
- **Synchronize Virtual Coach:** Automatically places the 'Virtual Coach' at your current position.
- **Take photo:** A photo picture is automatically taken using the camera of the device.
- **Window zoom:** Draw an area on the map to zoom to it.
- **Zoom 100%:** Zoom will be automatically set displaying map at its maximum resolution.

**Note:** Due to platform restrictions, some functions may only be available in certain TwoNav platforms.

## 13 APPENDIX: SPECIAL CHARACTERS

You may have to type signs that do not appear in the keyboard system.

In these cases, you will have to check this table of character equivalences, so that you will know which sign to introduce:

- **'A'** → 'À', 'Á', 'Ä', 'Â', 'Å', 'Ã', 'Æ'

- 'C' → 'Ç'
- 'D' → 'Ð'
- 'E' → 'É', 'È', 'Ê', 'Ê'
- 'I' → 'Í', 'Ì', 'Î', 'Ï'
- 'N' → 'Ñ'
- 'O' → 'Ó', 'Ò', 'Ö', 'Ô', 'Ø', 'Õ', 'Œ'
- 'S' → 'Š', 'ß'
- 'T' → 'Þ'
- 'U' → 'Ú', 'Ù', 'Ü', 'Û'
- 'Y' → 'Ý', 'ÿ'
- 'Z' → 'Ž'
- ' ' → ' ' (space)
- ' ' → ' ' (space)
- ' ' → ' ' (space)

For example: If you have to type 'LidlStraße', press 'S' instead of 'ß'.